



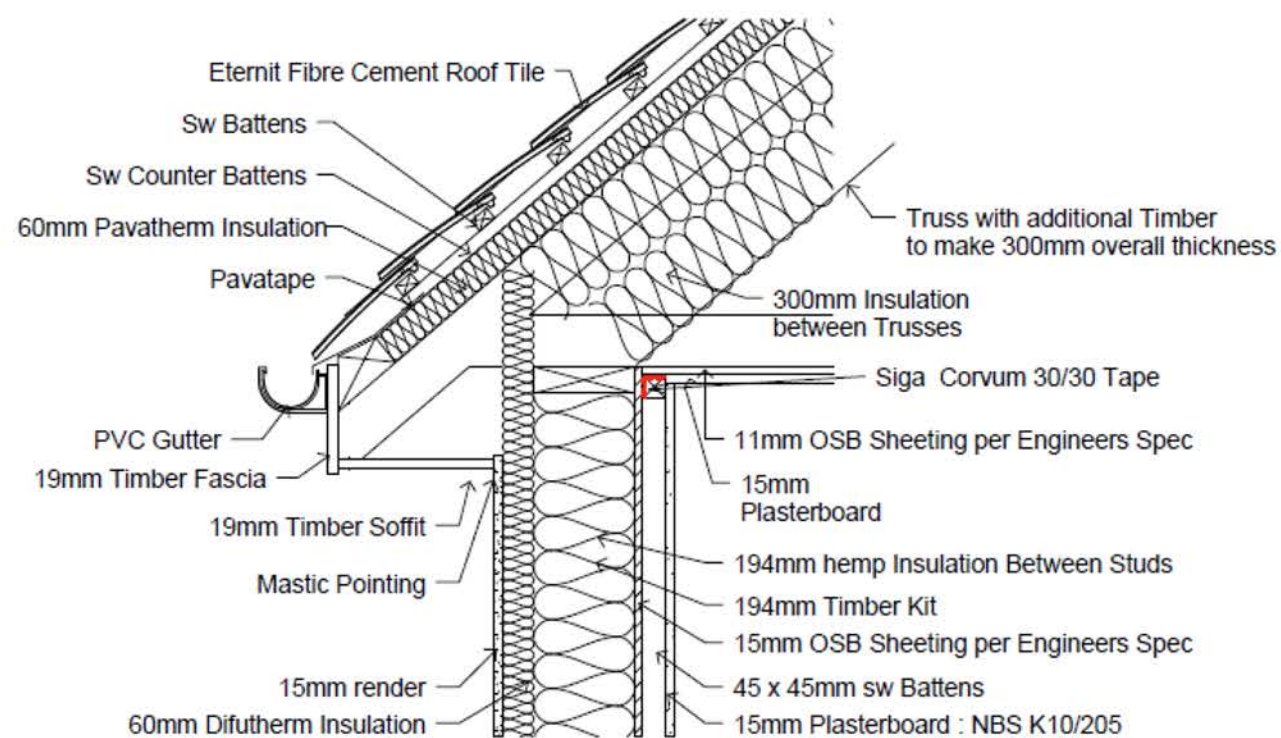


Eaves Section Detail - Warm Roof

Not to scale

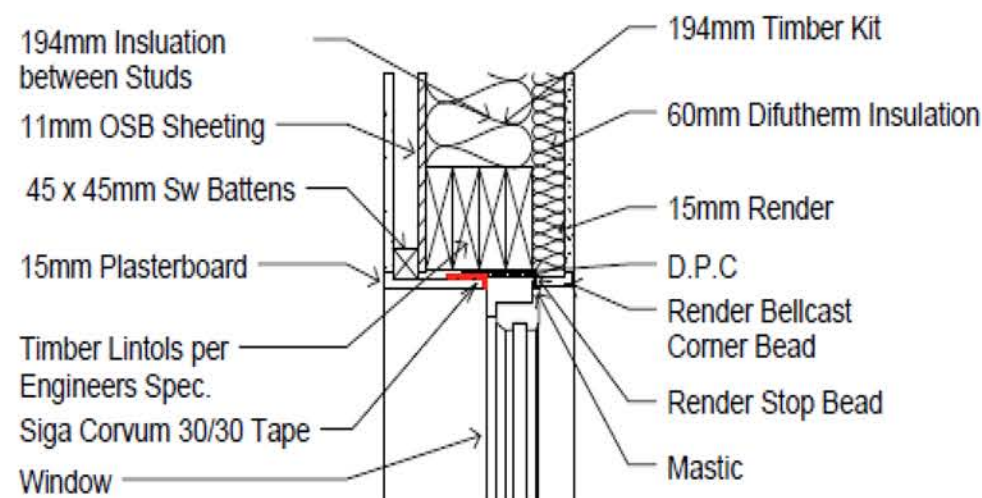


Window Head Section Detail

Not to scale

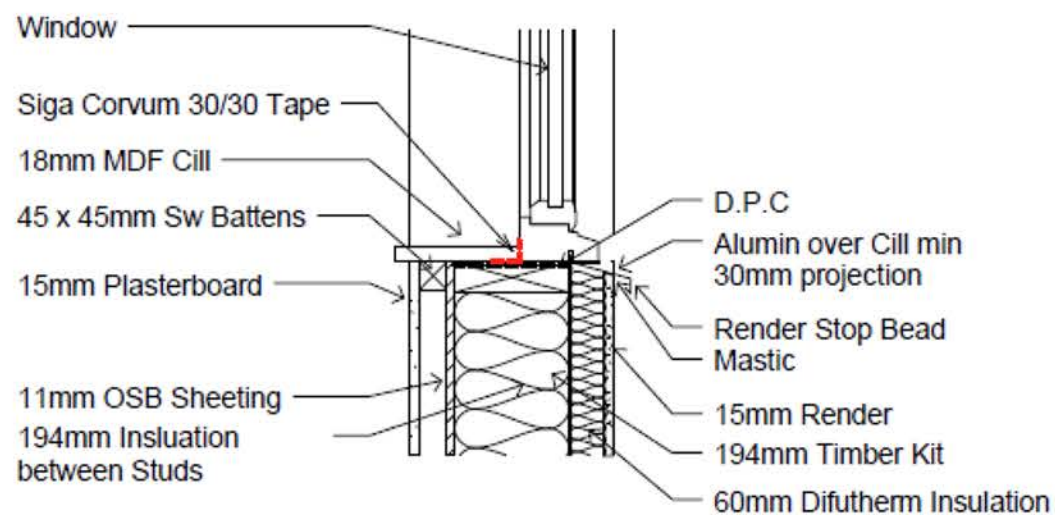


Window Cill Section Detail

Not to scale

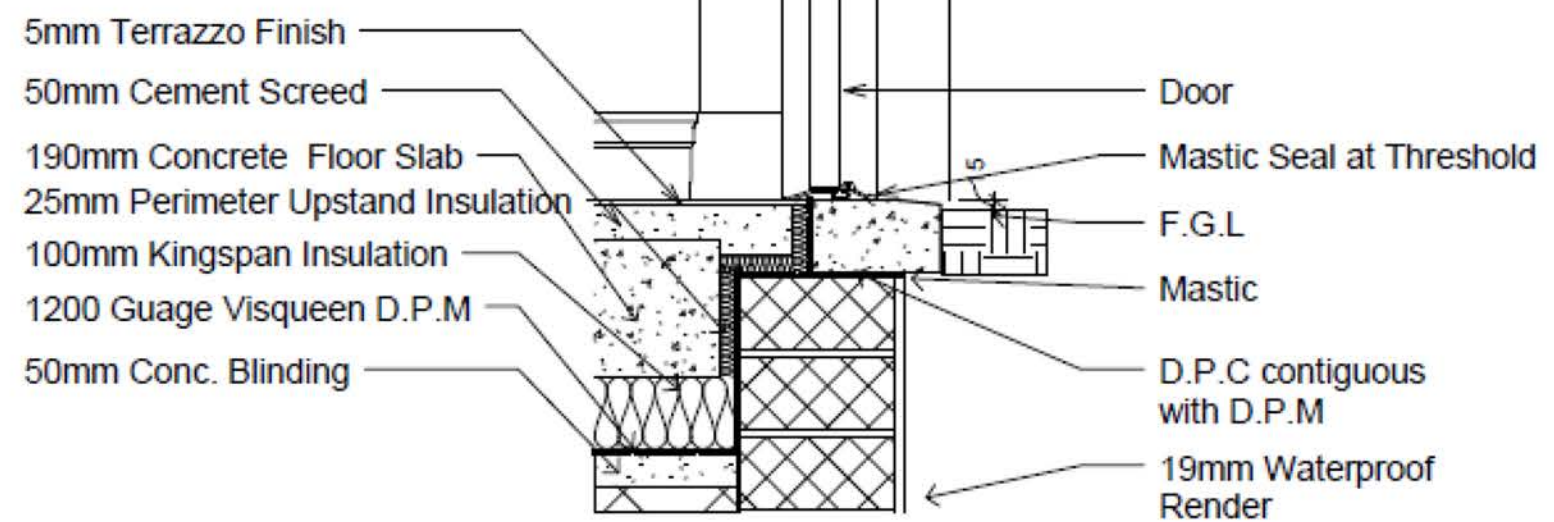

Door Threshold Section Detail

Not to scale

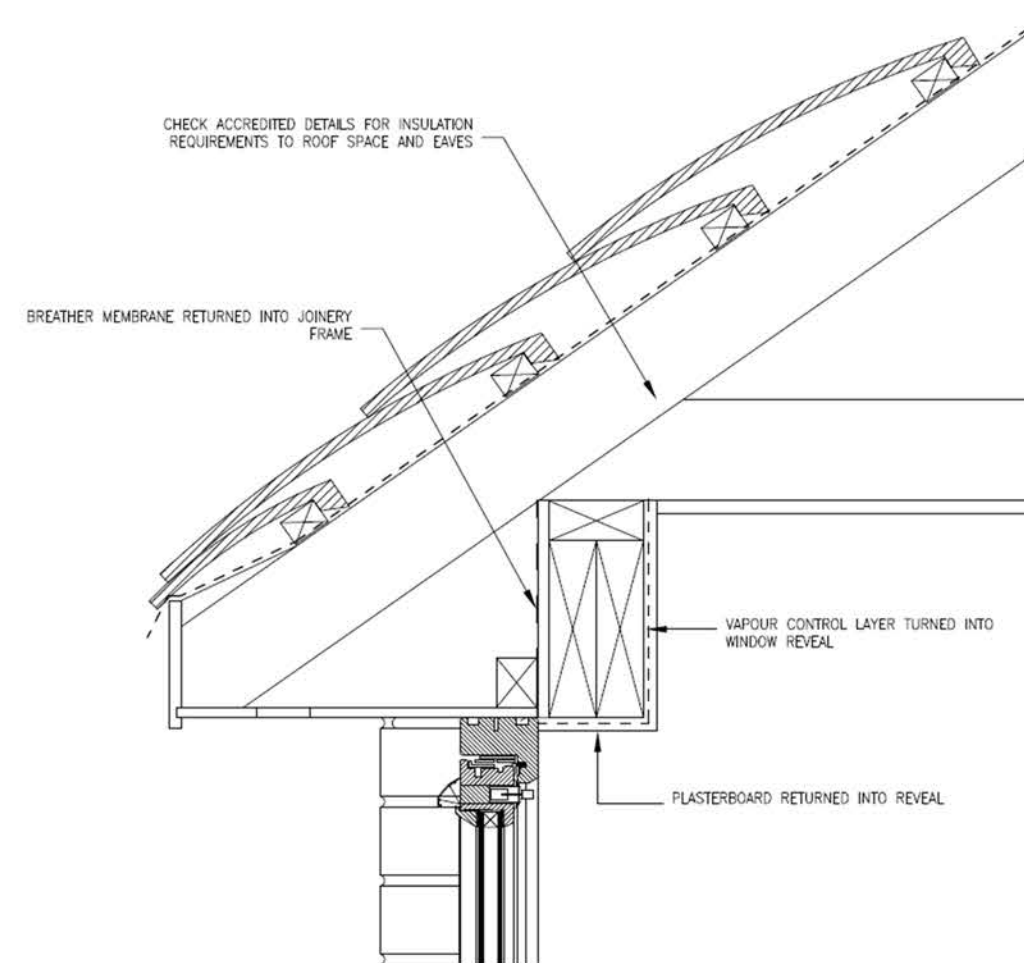

Eaves at Window Head

Not to scale

ENSURE WINDOW IS INSTALLED TIGHT AT THE HEAD WITH GAP AT BOTTOM OF WINDOW FRAME TO ALLOW FOR DIFFERENTIAL MOVEMENT DEPENDING UPON HEIGHT WITHIN BUILDING

WINDOW FRAME IS TO BE FIXED TO TIMBER FRAME WITH FRAME CRAMPS AND MUST REMAIN INDEPENDENT FROM MASONRY TO ALLOW FOR DIFFERENTIAL MOVEMENT