
 


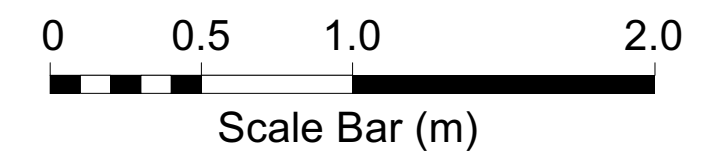

Do not scale from this drawing; always work to noted dimensions.
 All setting out, levels and dimensions to be agreed on site.
 All dimensions are in millimetres unless otherwise stated.
 The dimensions of all materials must be checked on site before being laid out.
 This drawing must be read with the relevant specification clauses and detail drawings.
 Order of construction and setting out to be agreed on site.



Manchester | Gloucestershire | Leeds | Liverpool | London

f: planit-ie.com
e: info@planit-ie.com
t: 0161 928 9281

Drg Title Plant Room Elevations

Scale	Size	Workstage
AS NOTED	A1	RIBA 3

© Planit I.E. Limited