


A INSTALLATION OF LENGTHS

- 1** The installation of length should follow the gas direction mark

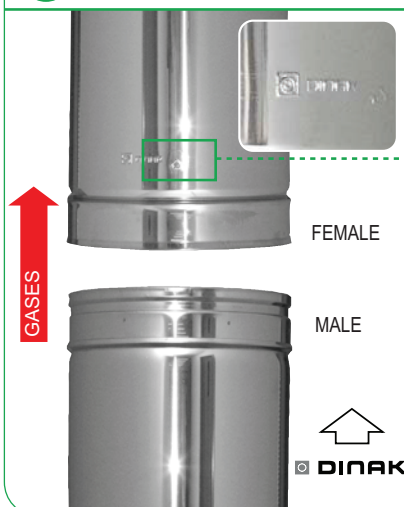

- 2** for $\varnothing$ 80 mm to 130 mm: lubricate the external face of the inner wall of the female end
for $\varnothing$ > 130 mm: lubricate the internal face of the inner wall of the male end



- 3** Fit and tighten the locking band



B TEE AND SOOT COLLECTOR



C INSTALLATION OF ADJUSTABLE LENGTHS

- 1** Disassemble the 2 sections by loosening the locking band



- 2** To reduce the length of the adjustable: remove the insulation from the Female end and cut it to the desired length



- 3** Place the joint:
for $\varnothing$ 80 mm to 130 mm: in the wall of the male end
for $\varnothing$ > 130 mm: in the inner wall of the female end



- 4** for $\varnothing$ 80 mm to 130 mm: lubricate the external face of the inner wall of the female end
for $\varnothing$ > 130 mm: lubricate the internal face of the inner wall of the male end



- 5** Re-assemble the Female and the Male sections and fix the locking band



- 6** Tighten the locking band

