

5.0 Recommended service and maintenance

Canopy and Ductwork

Internal clean to TR-19 specification, minimum once per year, monitored and possible increased to twice per year

Grease filters in the canopy should be removed and cleaned daily.

ESP module (in stacked & double pass arrangement)

Quarterly service, where the soiled cell is removed, and replaced with a clean cell. The casing should be cleaned to TR-19 standards.

The soiled cells are returned to the factory for steam cleaning.

MFU module, containing panel and carbon filters

The panel filters should be replaced quarterly

The carbon filters should be checked quarterly, and replaced at least annually.

Extract and Fresh Air Fans

Quarterly check and a full service including a 'drawn current' test on the fan motor.

Fresh Air Filter

Quarterly clean of filter module, and annual replacement of filter media

Fresh Air Heater

Quarterly check on the heater, with 'drawn current' test on the element.