
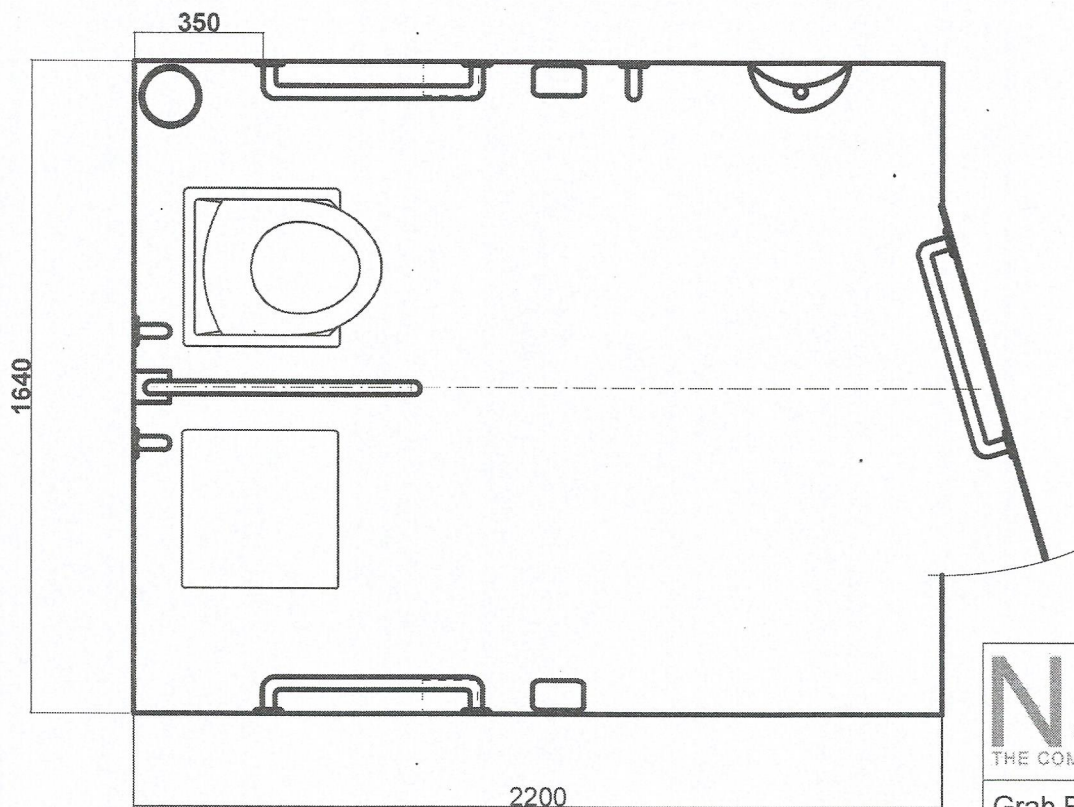


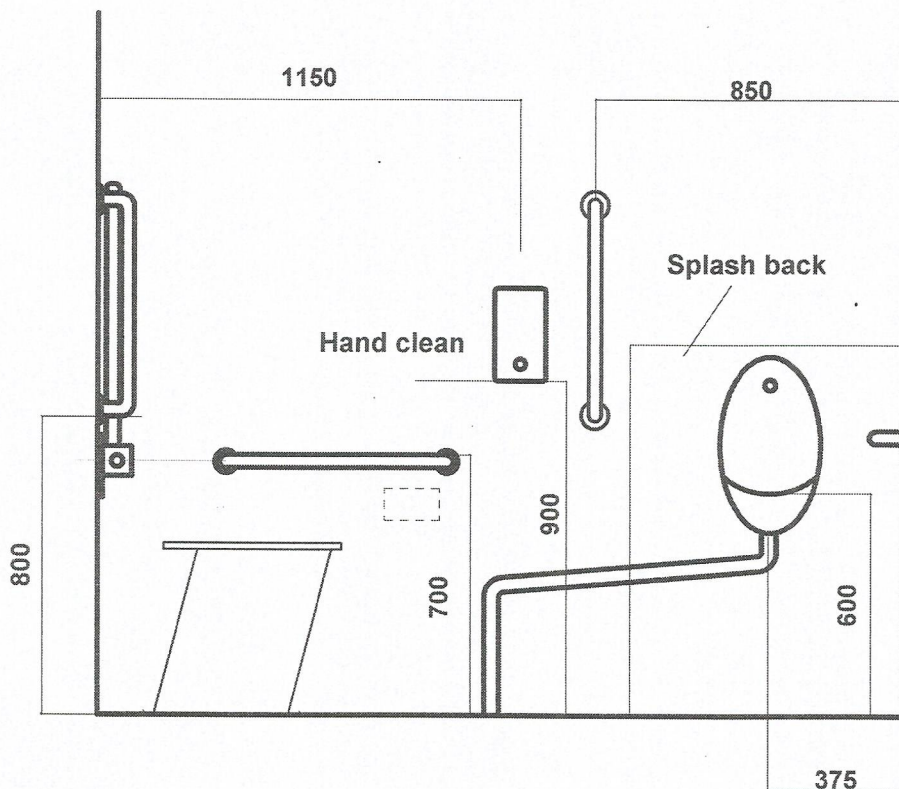

NB: There are some other internal fittings which for simplicity are not shown on this drawing. If you are constructing your own building it is important to line the cubicle with a good quality board not less than 12mm thick in order to fix these without difficulty.

DWG No. 8 INTERNAL LAYOUT

NatSol
THE COMPOST TOILET SPECIALISTS

Grab Rail Wooden Building

Drg. No. FA 011 mw 1

Date: 5.12.11 Scale: 1:20

Drawn: NJG altered mw

NatSol Ltd

Tel: 01686 412653

www.natsol.co.uk