


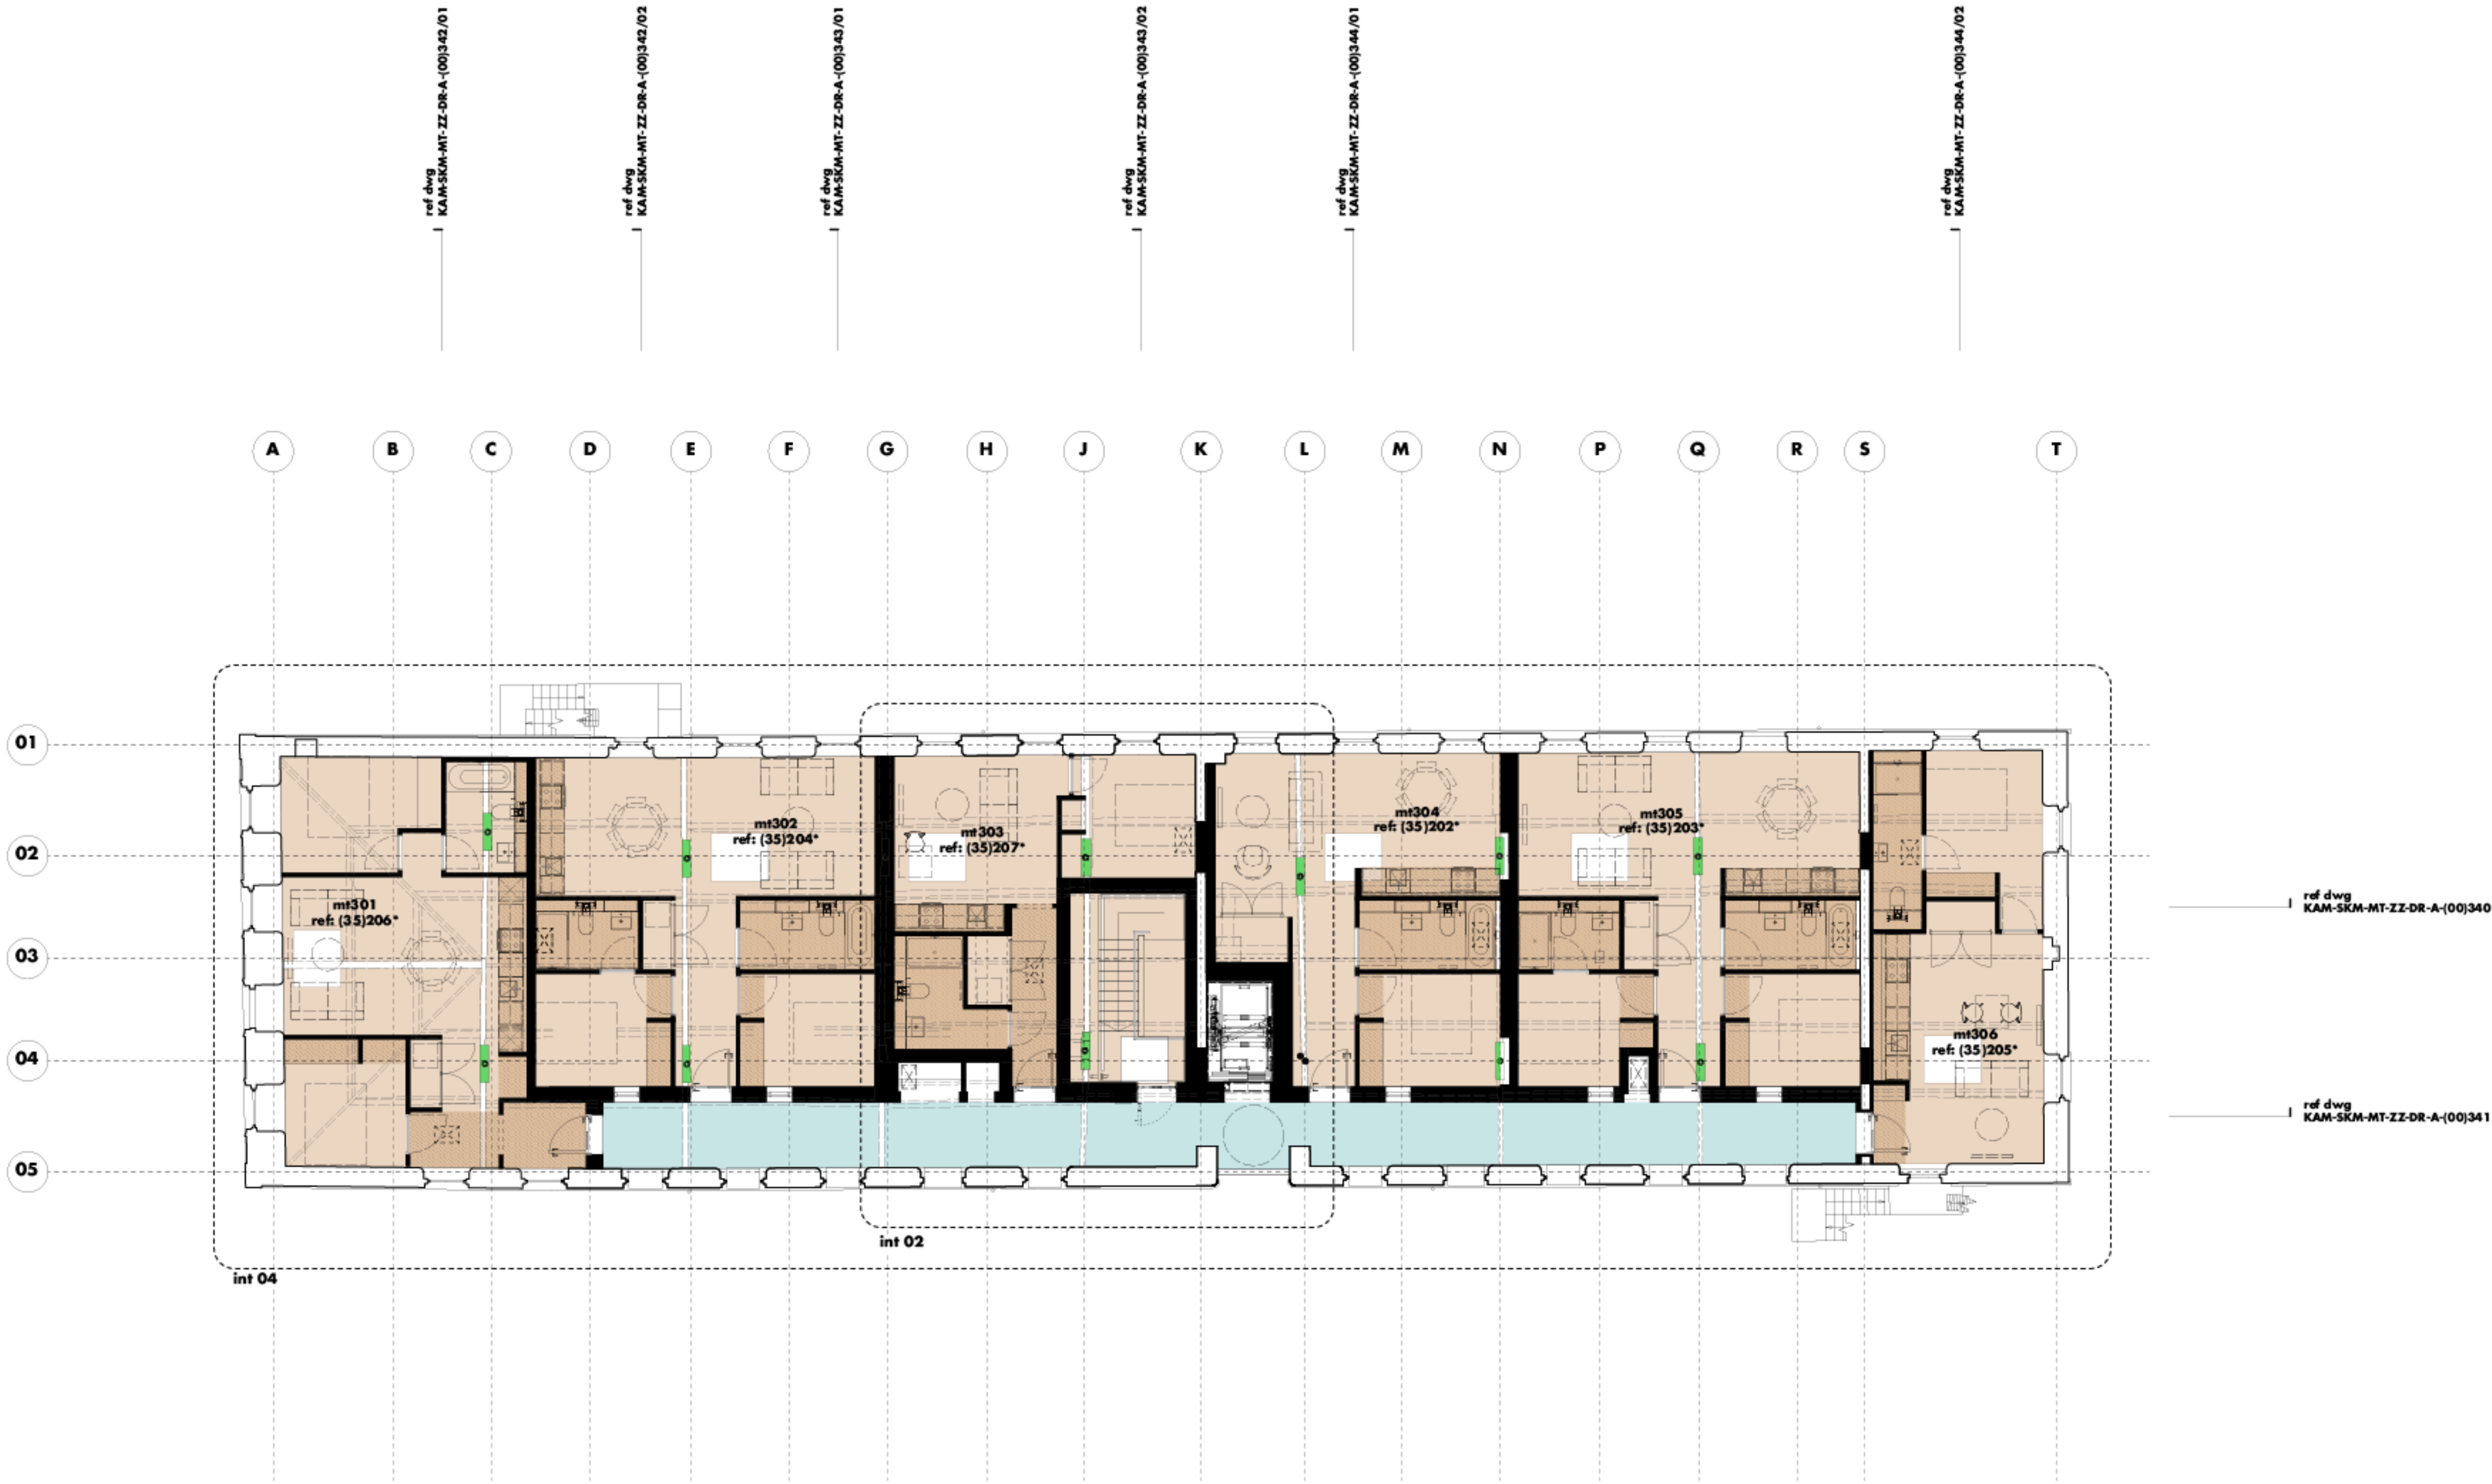

- plasterboard ceiling (set between timber beams)
- plasterboard ceiling (following roof pitch)
- lowered bulkhead/ceiling
- plasterboard ceiling (left unfinished under base build)
- pointed finish (steel stair)
- supalux board on timber joists
- intumescent paint
- change from original application, refer to changes schedule for further details