

Roller Shutter: Solid Lath

Make Up: Solid



Used: Solid lath is typically used on back of house.




Group Command:
Used when more than one shutter can be controlled from a single control panel.



Remote Handset/RSD:
Typically 5 Handsets supplied per shutter install.

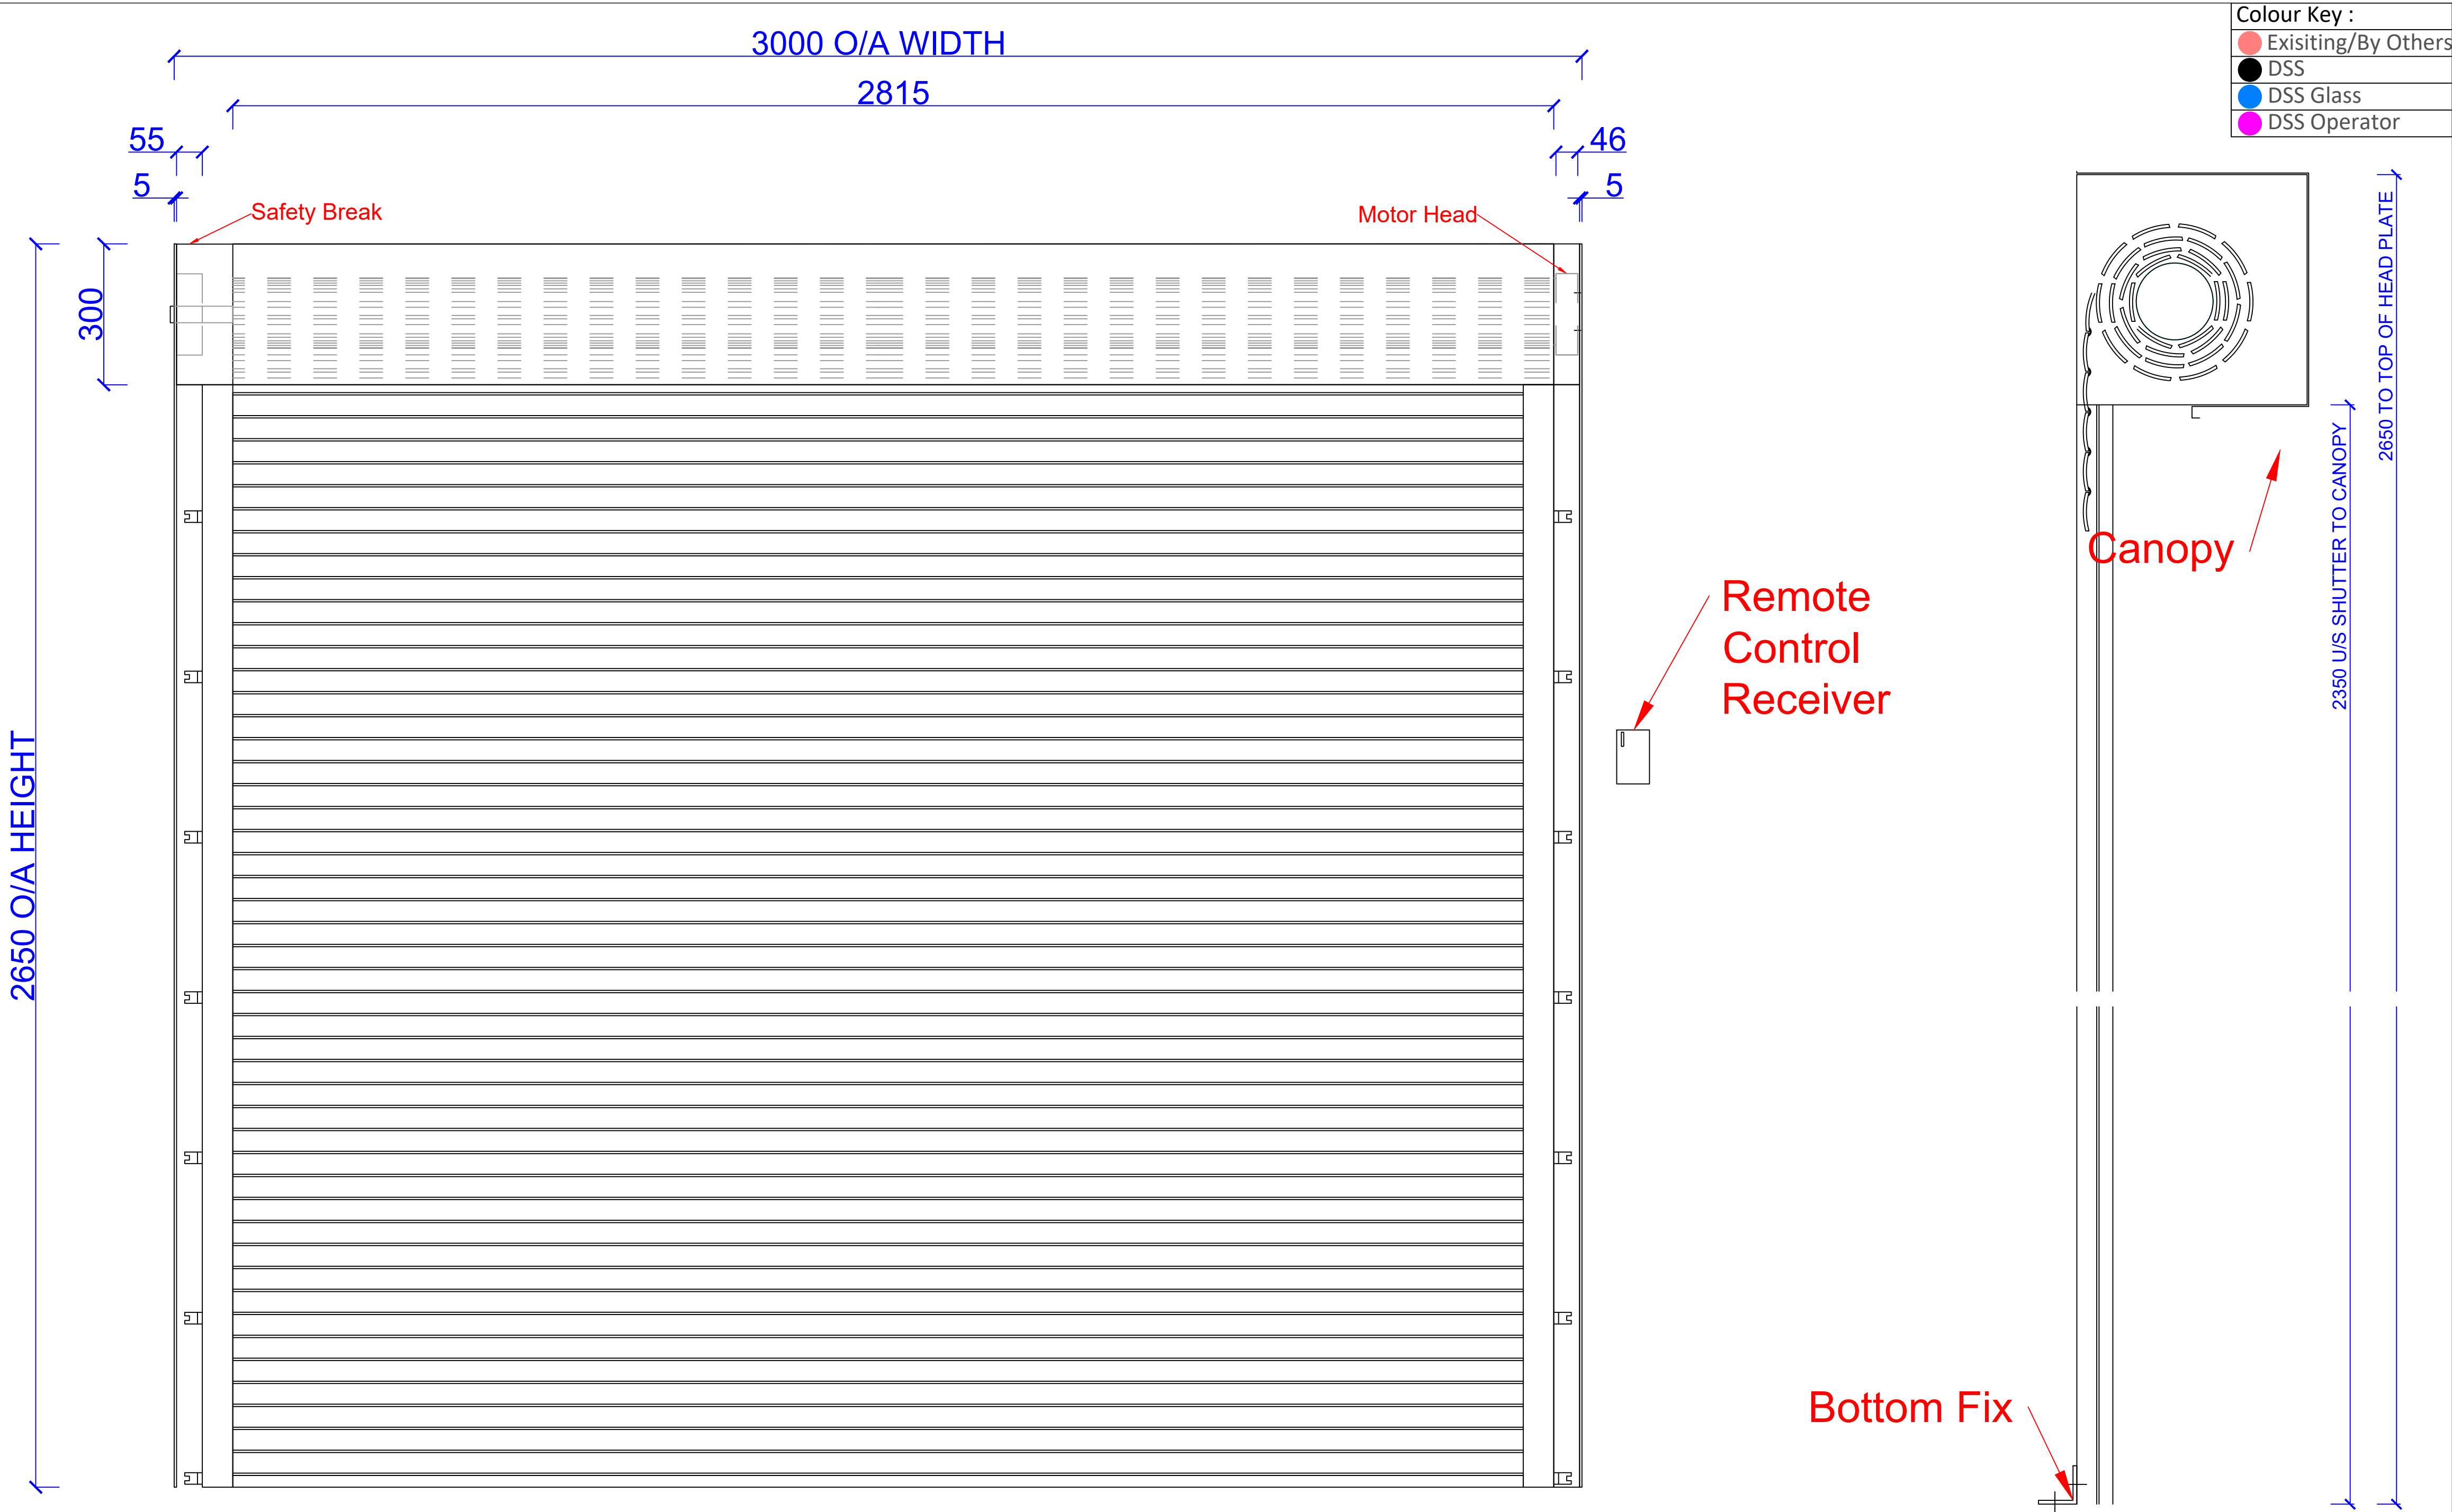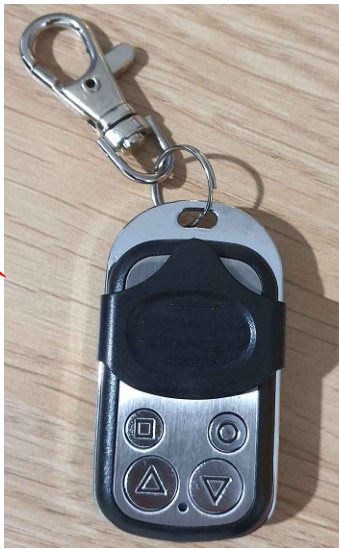

Colour Key :	
●	Existing/By Others
●	DSS
●	DSS Glass
●	DSS Operator

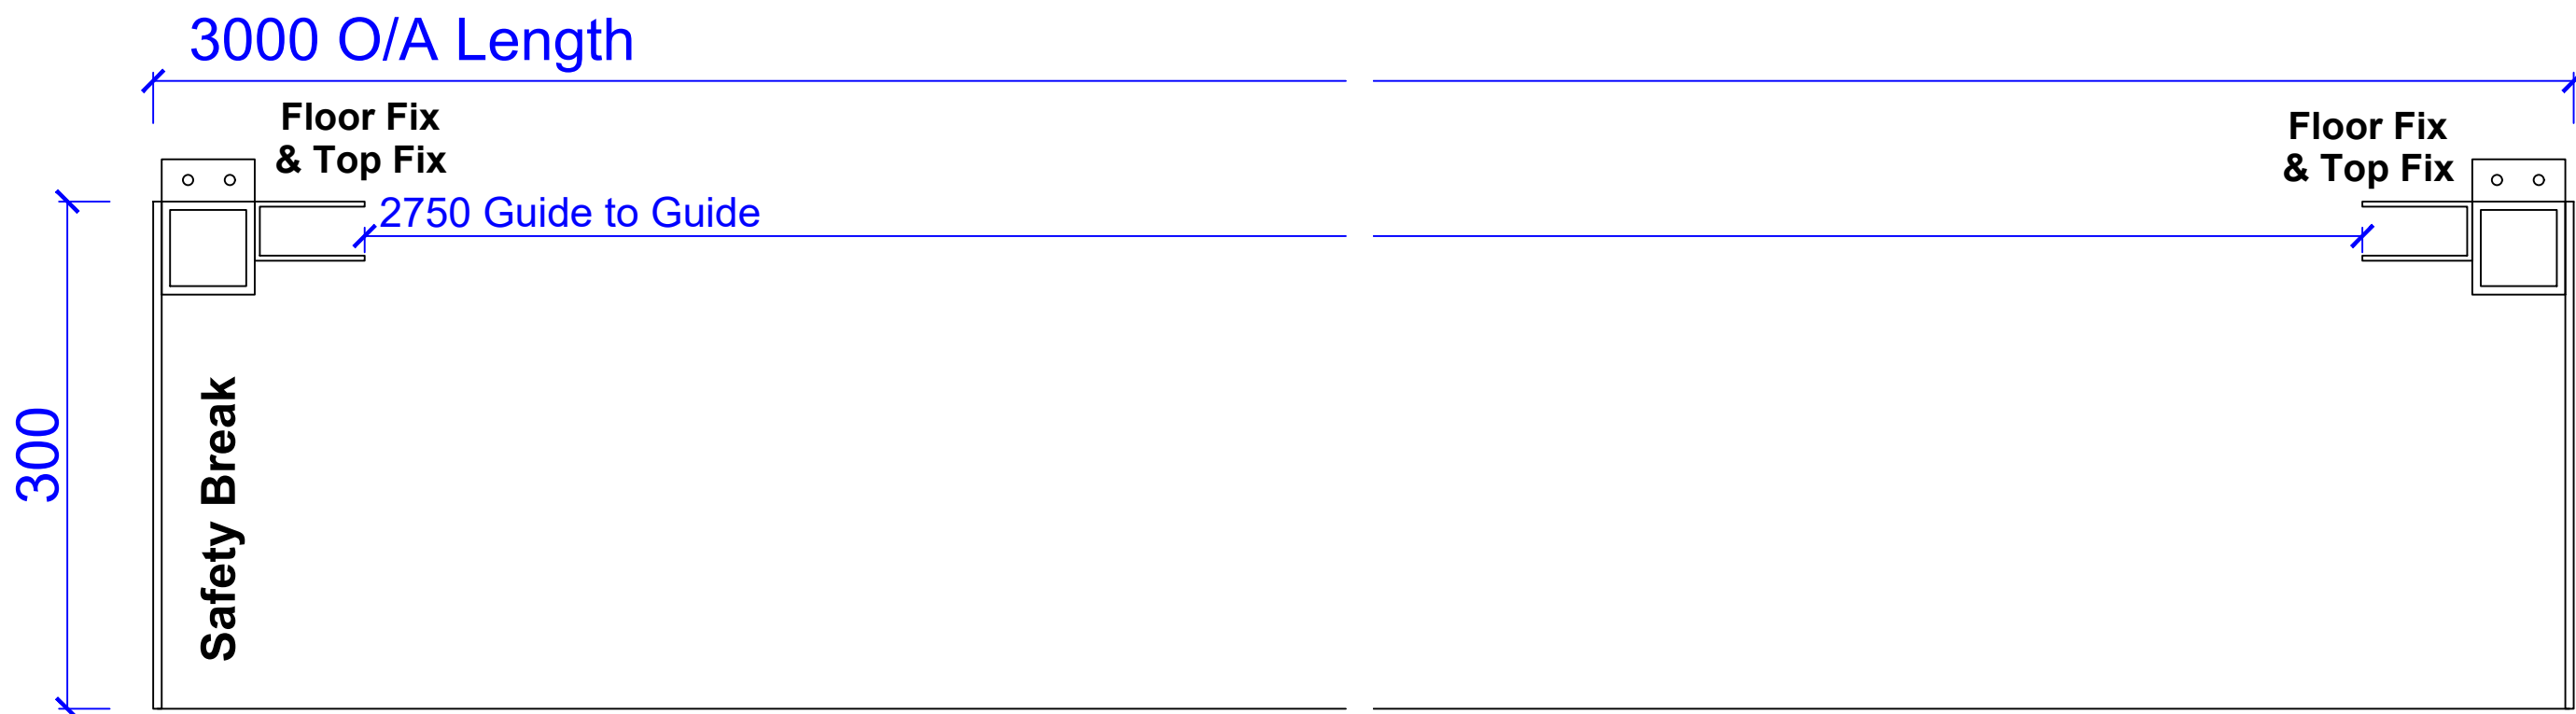

Information:		
Typically on shopfront, lath is painted RAL 7043. However, in back of house it would be galvanized steel.		
Spur should be no more than 1m from the motor.		
Operation is normally by remote FOB system.		
INDICATIVE DRAWING		
Client: Co-op		Job:
Address:		
Dwg. Title: Solid Lath Shutter		
Drawn by: CW	Revision:	Dwg. No:
Scale: NTS		01
Date: 19/12/19		

Roller Shutter: Perforated

Make Up: Solid - Perforated - Solid


Used: Perforated lath is typically used on front of house.




Group Command:
Used when more than one shutter can be controlled from a single control panel.




Remote Handset/RSD:
Typically 5 Handsets supplied per shutter install.

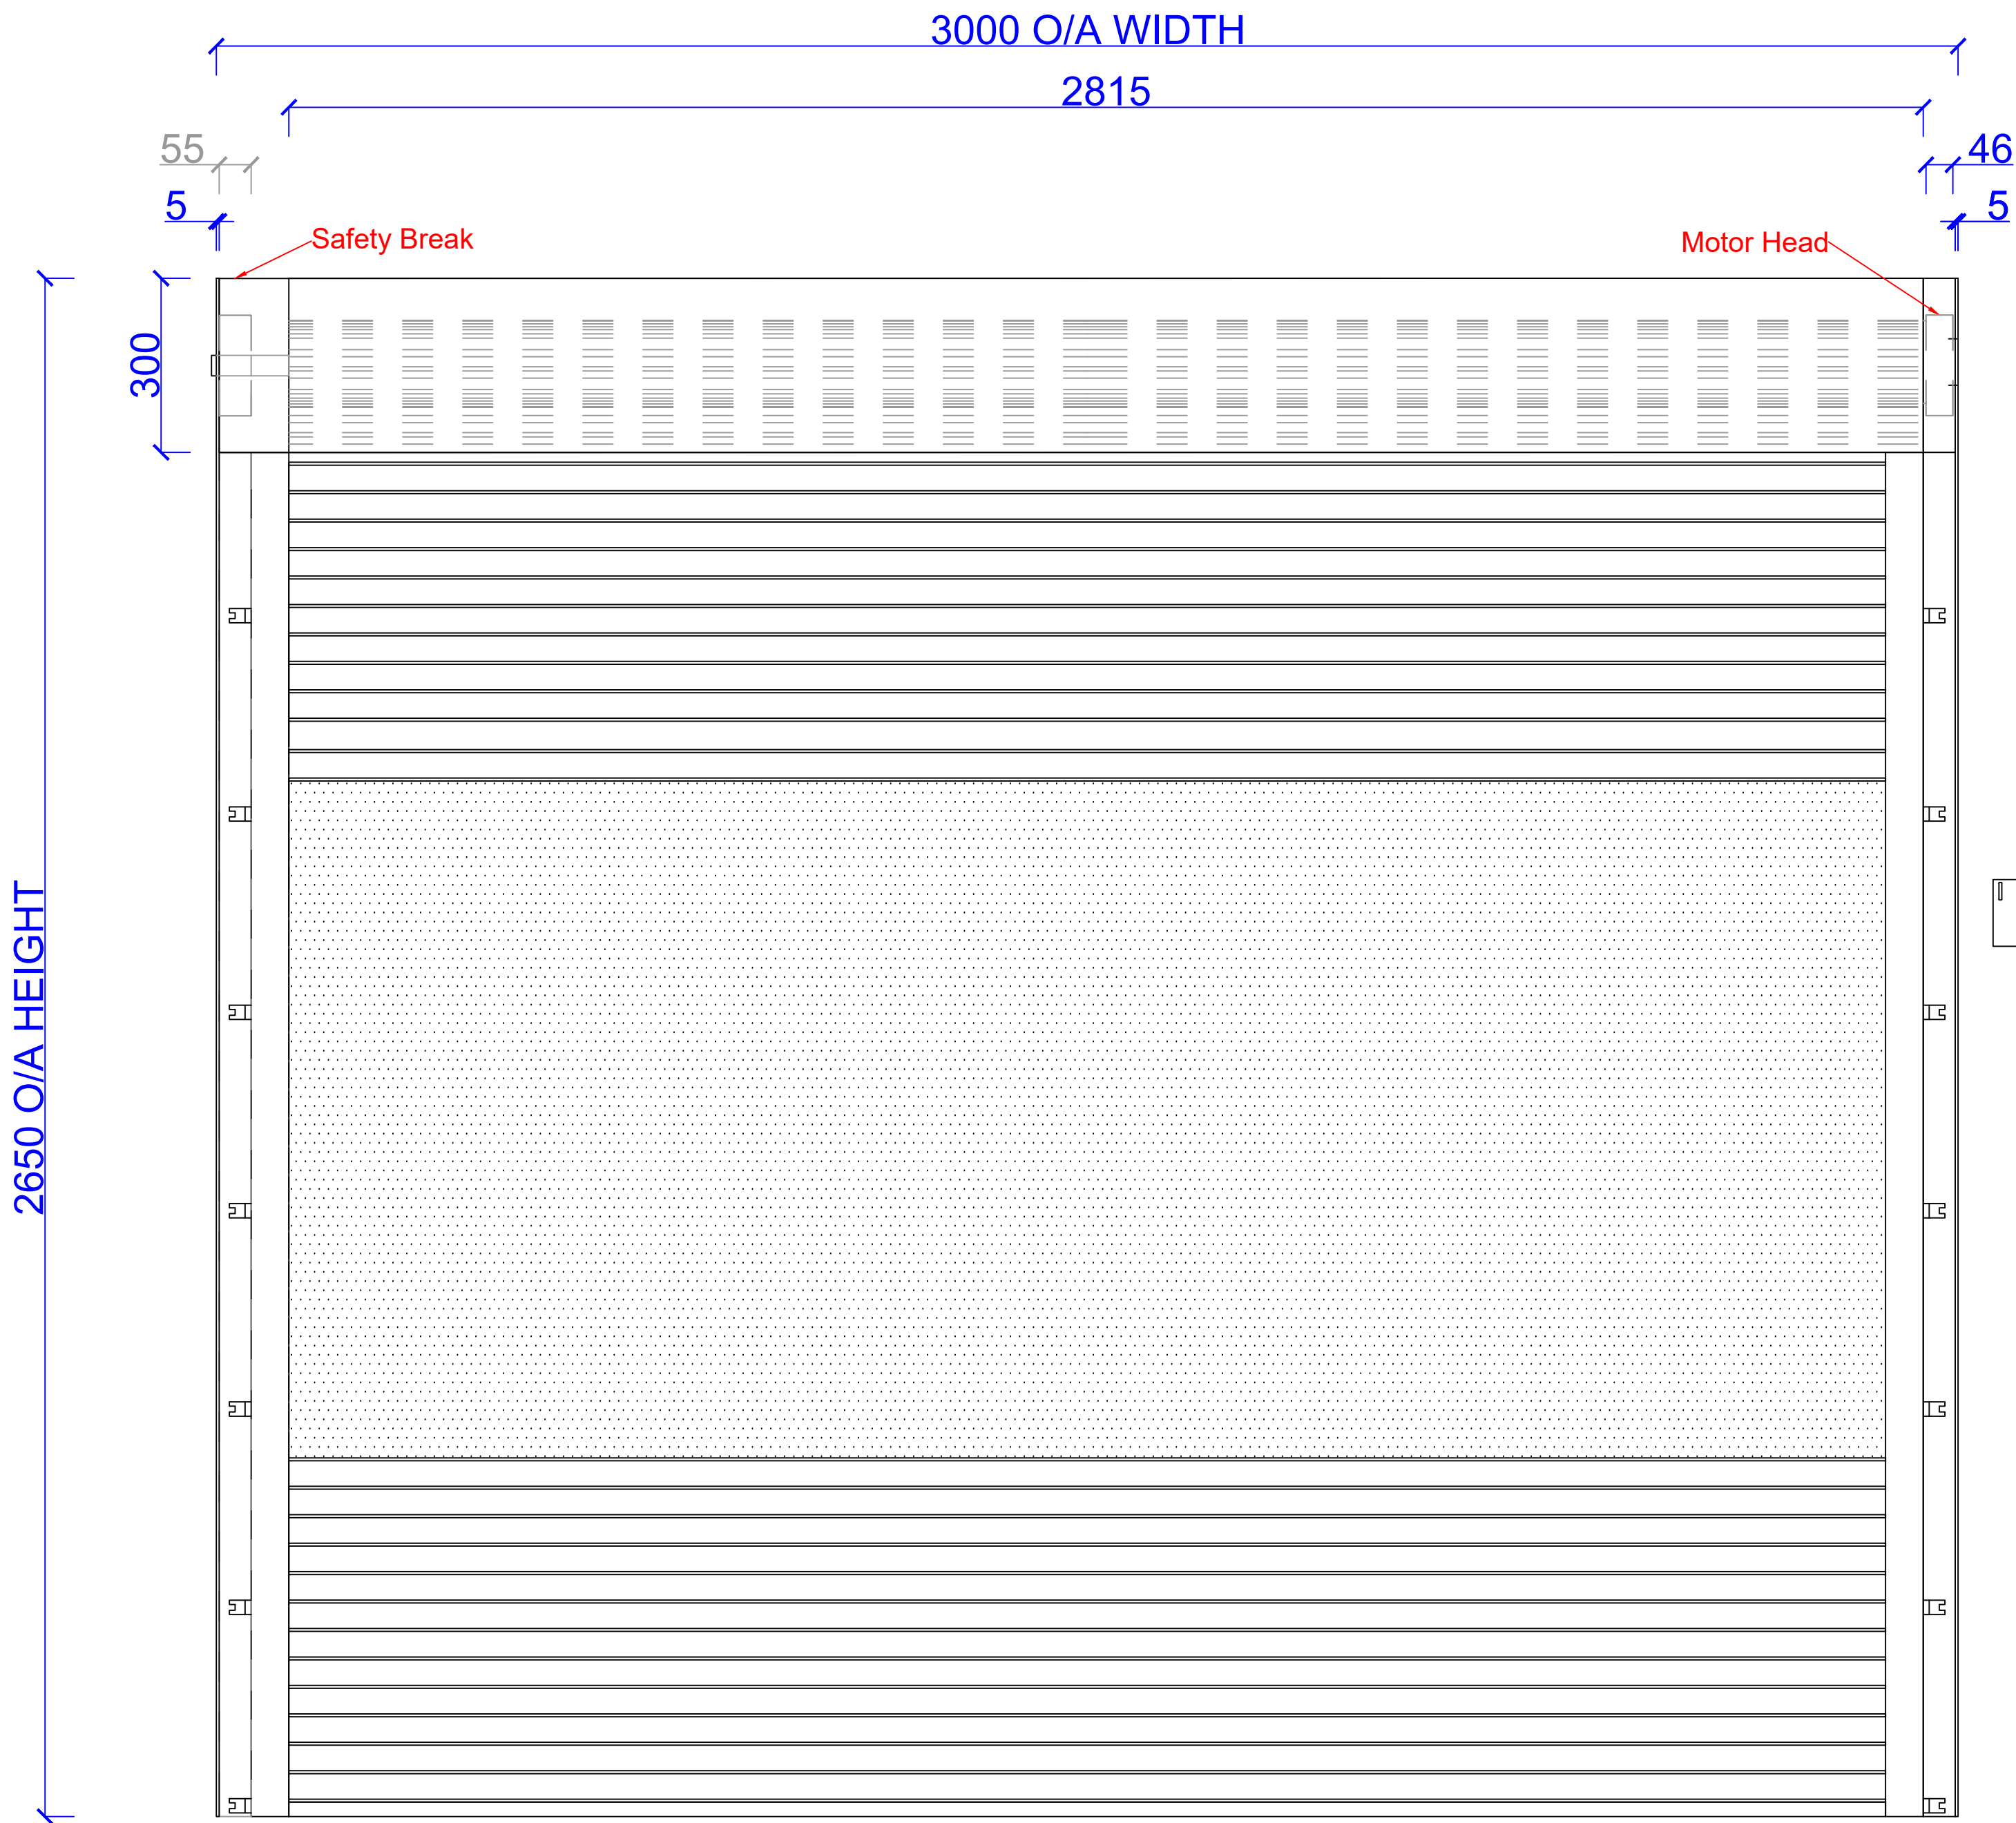

Bottom Fix

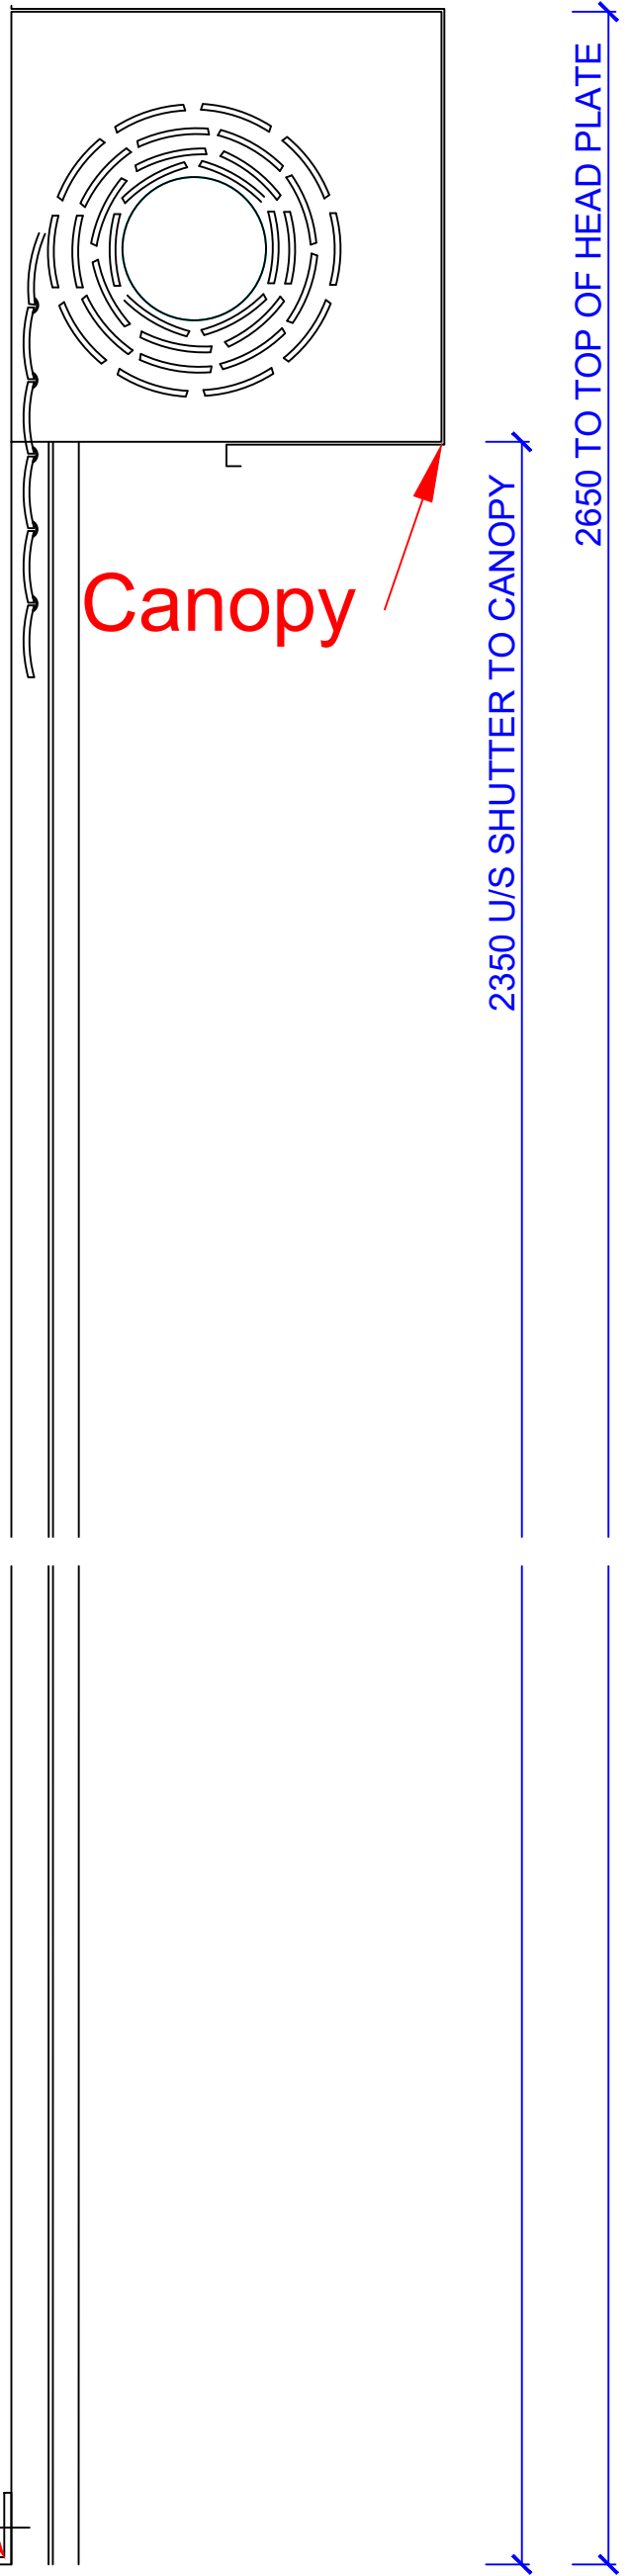

Colour Key :	
●	Existing/By Others
●	DSS
●	DSS Glass
●	DSS Operator

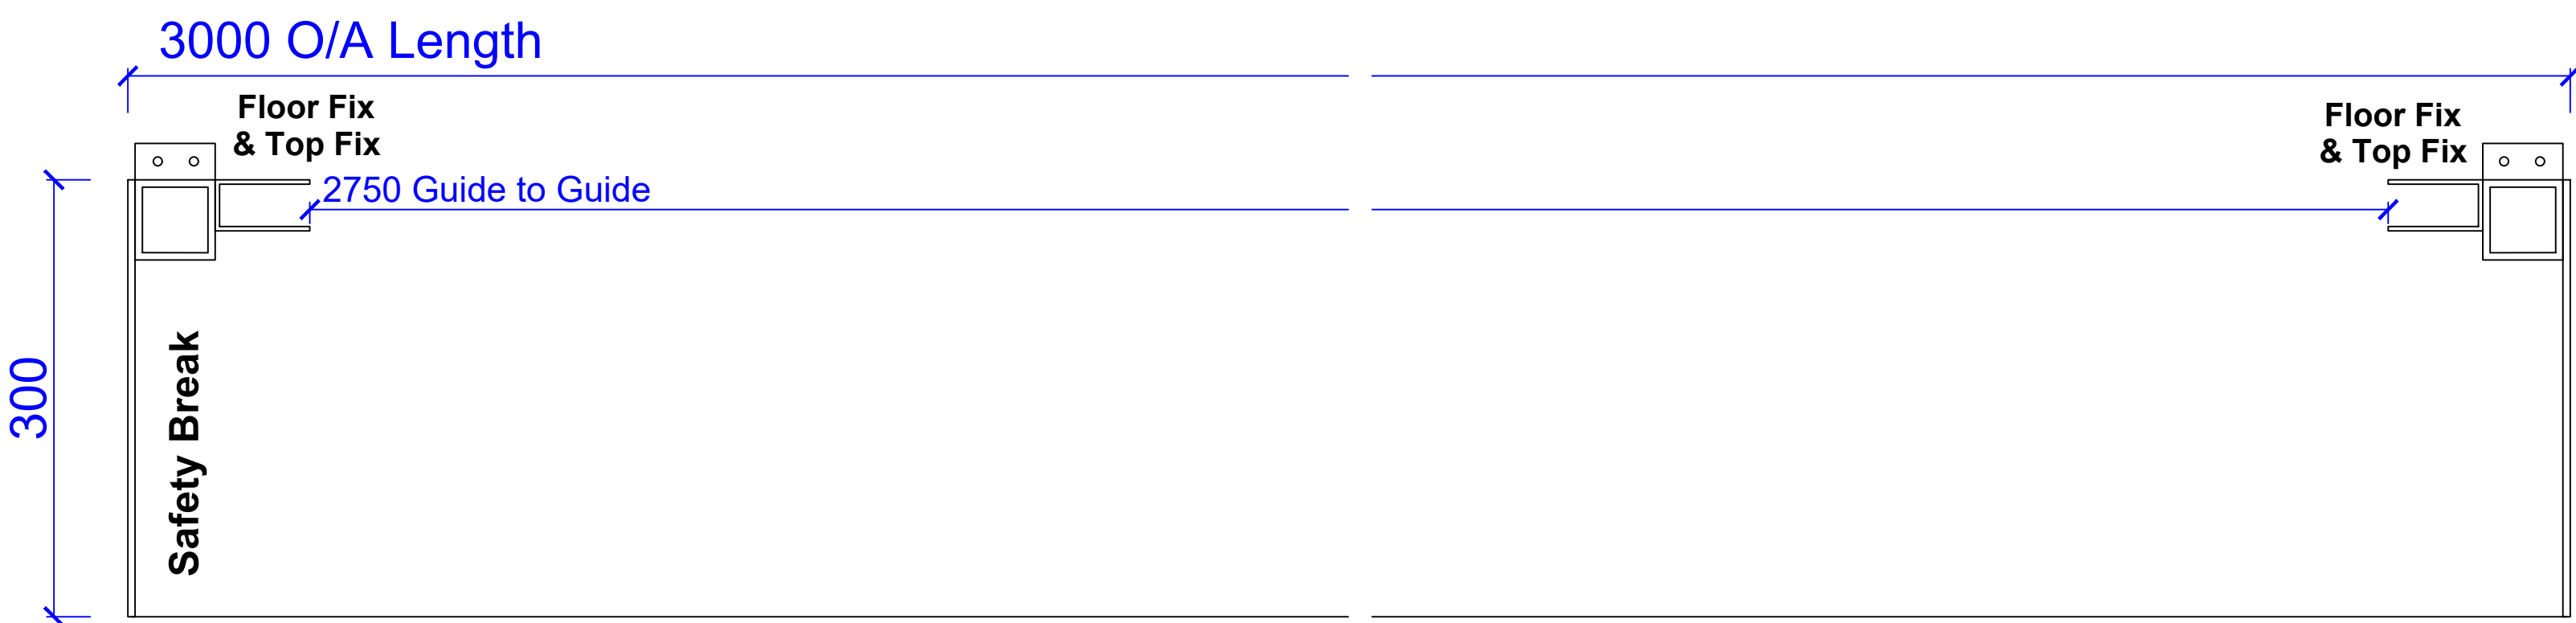

Information:	
Typically on shopfront, lath is painted RAL 7043. However, in back of house it would be galvanized steel.	
Spur should be no more than 1m from the motor.	
Operation is normally by remote FOB system.	
INDICATIVE DRAWING	
Client: Co-op	Job:
Address:	
Dwg. Title: Perforated Shutter	
Drawn by: CW	Dwg. No: 02
Scale: NTS	
Date: 19/12/19	

