
THE VICTORIAN AWNING COMPANY

www.victorianawnings.co.uk

VICTORIAN AWNING INSTALLATION GUIDE


(1) FIX AWNING BOX TO ELEVATION THROUGH THE BACK PANEL OF AWNING BOX.

MATERIAL	Brickwork / Concrete	MATERIAL	Timber (Hardwood 50mm min / Softwood 75mm min)
FIXING	Anchor Bolt M12 x 100mm	FIXING	Coach Screw
SIZE	M12 x 100mm	SIZE	Hardwood M12 x 65mm / Softwood M12 x 80mm)

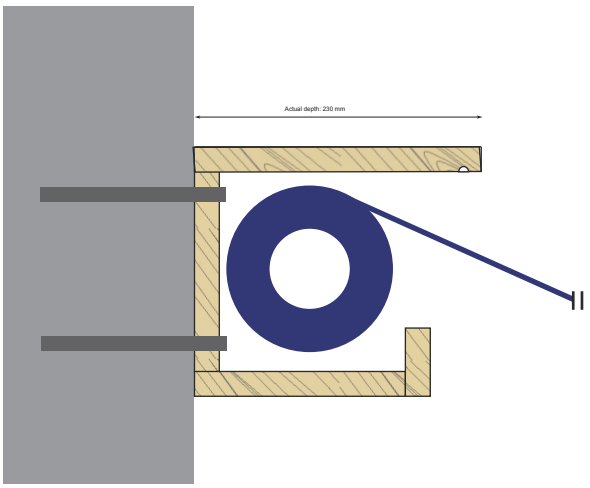


Fixing Positions - Aproximately 100mm from the ends of the box and every 600mm along the length.
DO NOT SCALE.

(2) CLAMP FRONT LATHE TO FACE OF BOX.

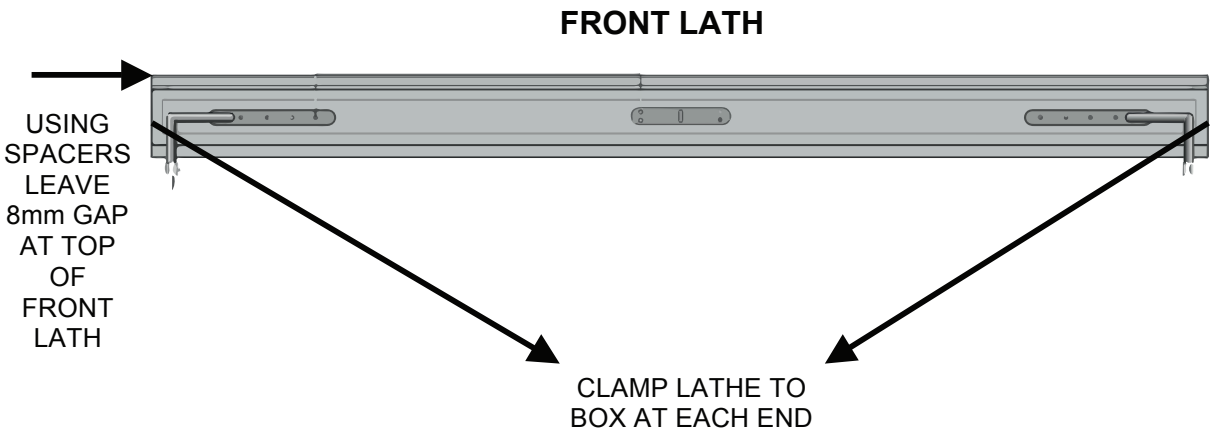

(3) OFFER THE AWNING ARMS UP TO FRONT LATHE.

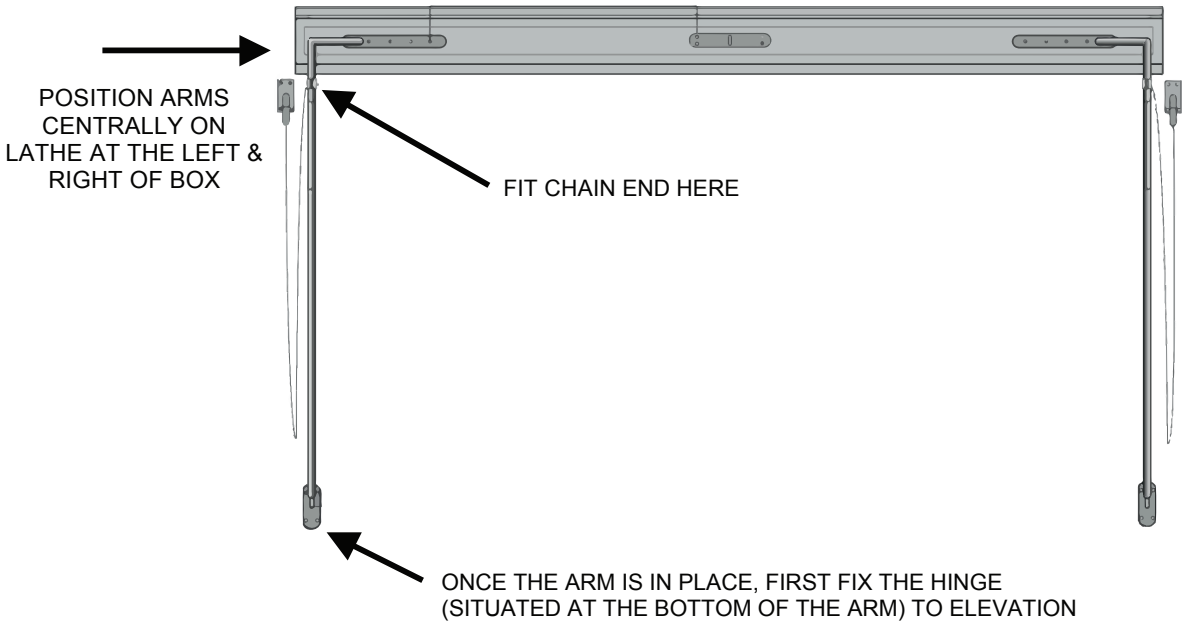

(4) FIX THE TOP OF ARM TO THE AWNING LATHE THROUGH THE HOLES SITUATED IN THE HORIZONTAL SECTION OF ARM.

(5) FIX CHAIN HOOKS TO WALL DIRECTLY BELOW THE AWNING BOX AT EACH FAR END (OR AS CLOSE TO THIS AS POSSIBLE).

(6) HOOK OPPOSITE END OF EACH CAHIN (CONNECTED TO AWNING ARM) TO EACH HOOK.


(7) RELEASE THE FRONT LATHE BY REMOVING THE CLAMPS AND LET DOWN GENTLY UNTIL SUPPORTED ON CHAIN.
LEVEL FRONT LATHE AND CUT CHAIN, LEAVE 3 LINKS ON EACH HOOK END SPARE.

(8) PLACE ROLLER INTO BOX AND INTO THE METAL BRACKETS AT EACH FAR END. SECURE IN PLACE USING FIXINGS REQUIRED.

(9) REMOVE THE PIN IN END OF ROLLER - THIS WILL RELEASE THE SPRING SO MAKE SURE SOMEONE IS HOLDING THE COVER. PULL AGAINST THE SPRING UNTIL ENOUGH OF THE FABRIC COVER CAN REACH THE FRONT LATHE. REPLACE PIN BACK IN THE ROLLER END TO SECURE SPRING.

(10) NOW NAIL COVER TO THE FRONT OF THE TIMBER FILLET ON FRONT LATHE USING NAILS PROVIDED.

(11) REMOVE PIN FROM SPRINGS, COVER WILL GO TIGHT. TRY BLIND UP AND DOWN.

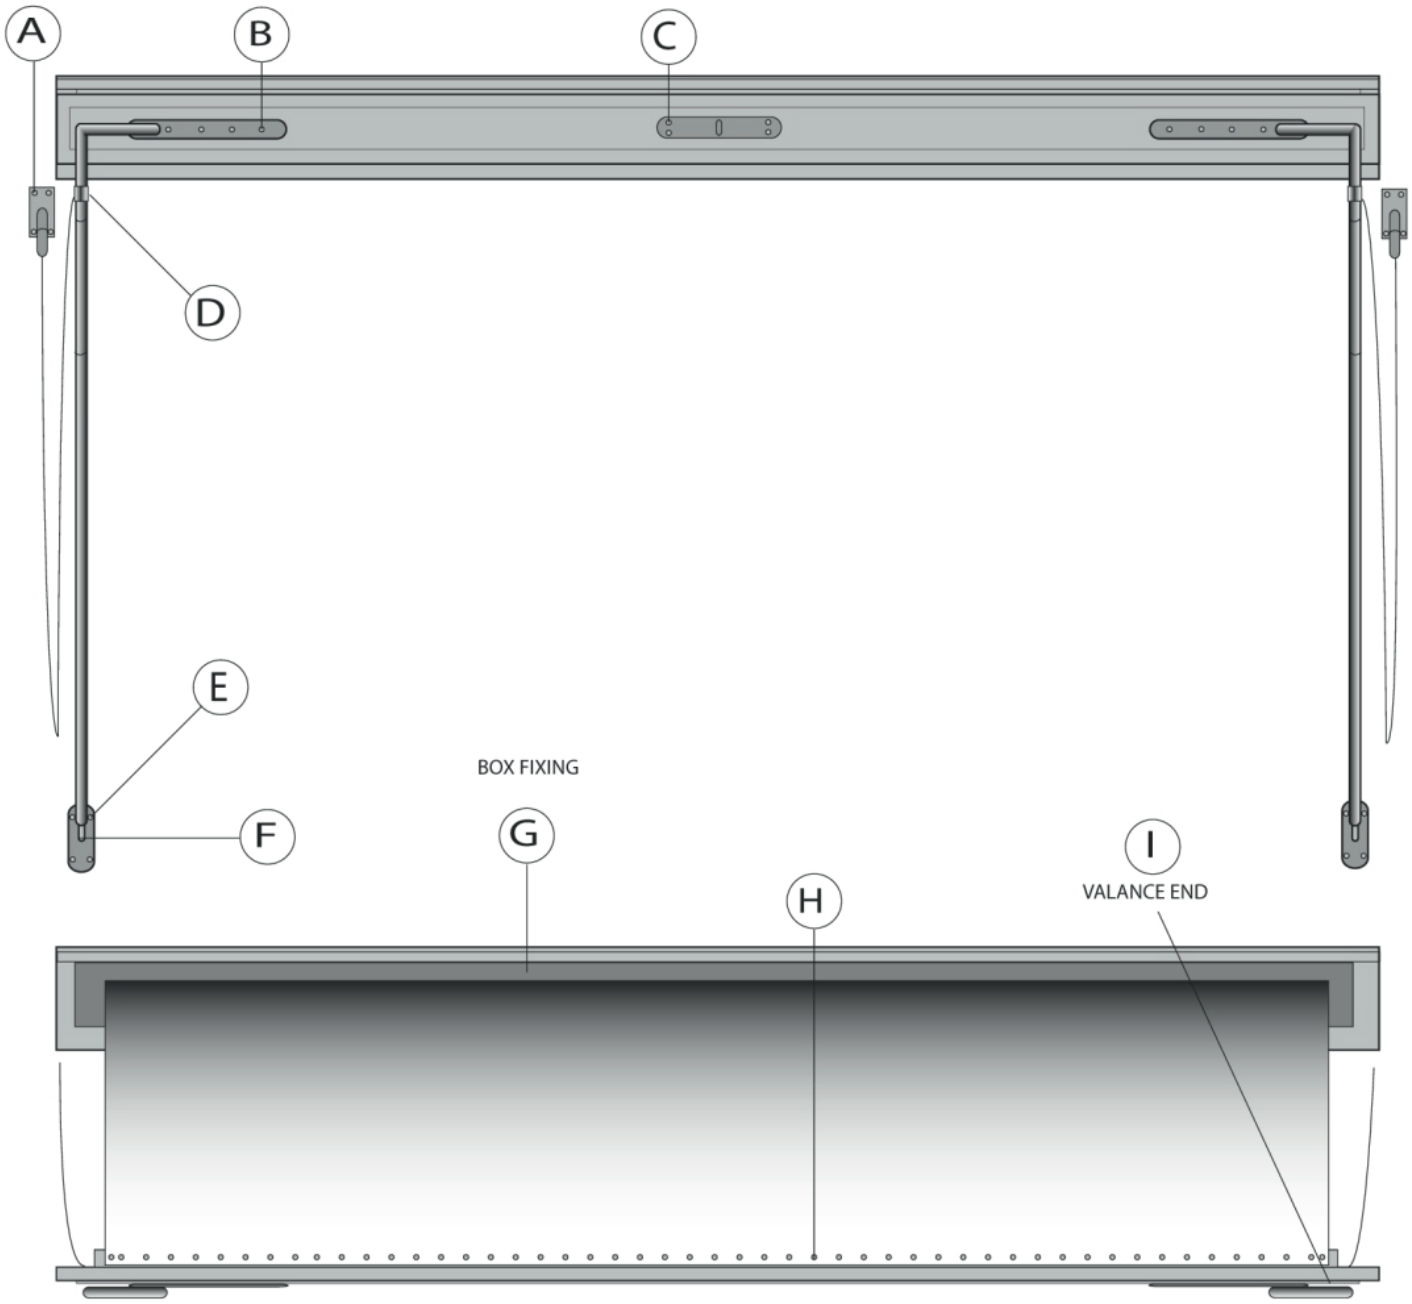

NAILS ARE TO BE SPACED 50mm APART, WITH AN EXTRA NAIL EITHER END OF COVER AS SHOWN

A CSK 12X63MM SLOTTED SCREWS OR IF A MORE HEAVY DUTY FIXING IS REQUIRED M8 RAWL -BOLTS OR M8 THUNDERBOLTS (CHEMFIX IF NECESSARY)

B CSK 12X 50MM SLOTTED SCREWS ONLY.

C CSK 12X38MM SLOTTED SCREWS ONLY

D M6 X 16MM OR 25MM BLACKENED HEX BOLT WITH DOUBLE LOCKING NUTS (ENSURE THEY ARE TIGHT!)

E CSK 12X63MM SLOTTED SCREWS OR IF A MORE HEAVY DUTY FIXING IS REQUIRED M8 RAWL -BOLTS OR M8 THUNDERBOLTS (CHEMFIX IF NECESSARY)

F M8 X 40MM BLACKENED HEX BOLT WITH DOUBLE LOCKING NUTS (ENSURE THEY ARE TIGHT!)

G M14 X 100MM THUNDERBOLTS OR M10 RAWL-BOLTS. INTO TIMBER USE M12 X 60MM COACH-SCREWS MINIUMUM. ENSURE FIXINGS ARE RECESSED INTO BOX

H 30MM CLOUT NAILS SPACED AS SHOWN

I 8X30 CSK BRASS SLOTTED SCREW WITH RED PLUG