

Key to materials:


1	Visqueen Zedex CPT High Performance Damp Proof Course
2	Visqueen Ultimate Gas Damp Proof Course
3	Visqueen Vapour Check or Visqueen Vapour Barrier
4	VisqueenPro Double Sided Jointing Tape
5	Visqueen Ultimate Gas Barrier NF-500
A	PFU-501 Preformed Units at corners

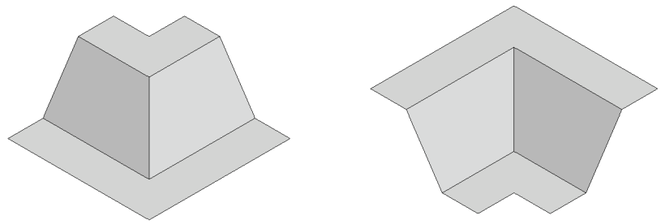


B	PFU-553 Preformed Units at corners

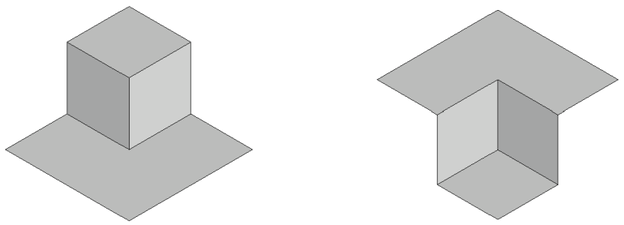

Ultimate Gas Barrier NF-500 Welded Joint

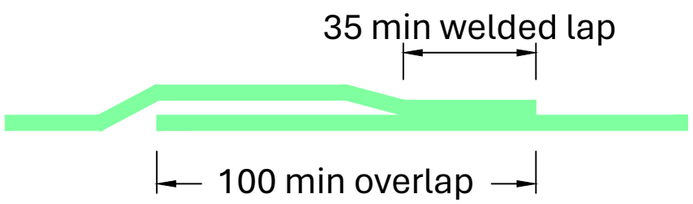

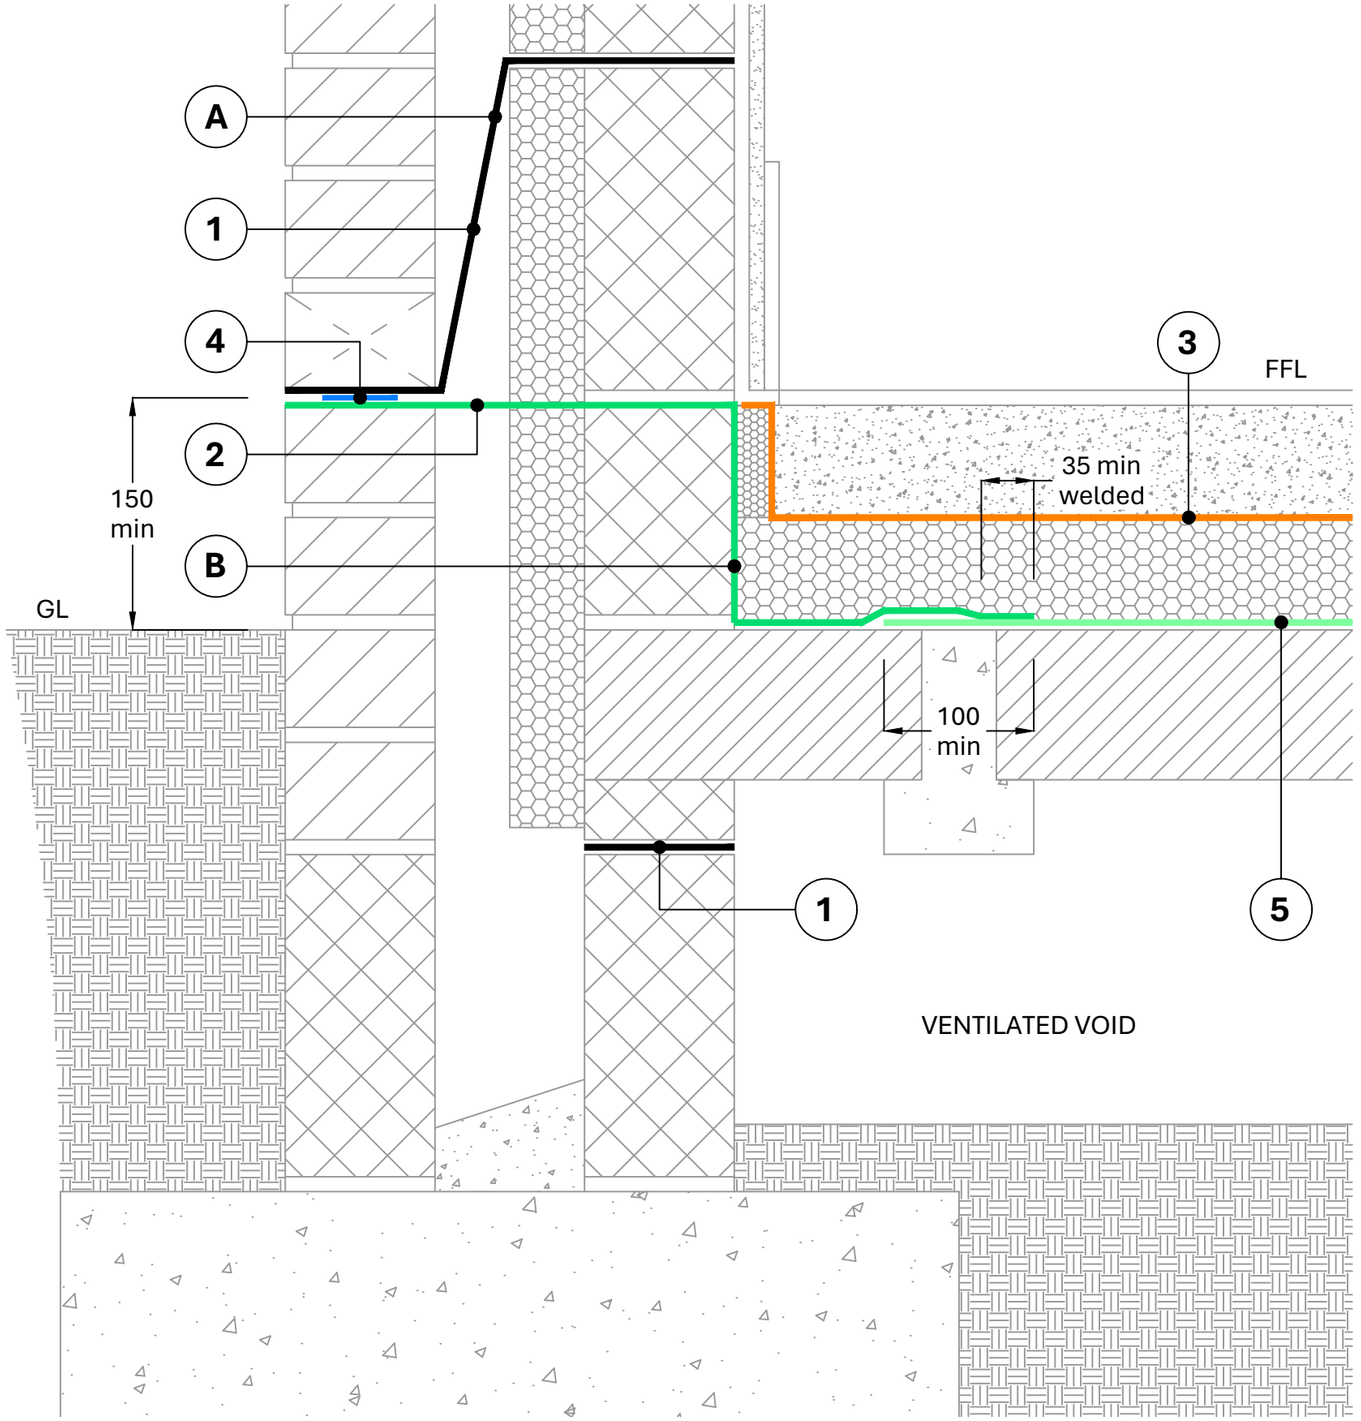

Section View

CRITICAL GUIDANCE NOTES

Visqueen Guidance Details are for illustration purposes only. It is the lead designer's responsibility to ensure Guidance Details are incorporated correctly into construction drawings.

Visqueen take no project design liability, or responsibility for the use of Guidance Details.

Drawing not to scale, use figured dimensions only. All figured dimensions are in millimetres.

British Standards are regularly updated. Visqueens' Guidance Details meet recommendations in place on date drawn.

Some Visqueen membranes can be installed with welded lap joints.

Visqueen Preformed Units are available to assist complex detailing, such as internal and external corners.

Contact Visqueen Technical Services for further information.

Guidance Detail

Drawing No: NF500-01

Drawn by: JR

Approved: SD

Date drawn: June 2025

Visqueen provide a Contract Design Service where project specific drawings can be produced. Contact Visqueen Technical Services for further information.

Tel: 0333 202 6800
enquiries@visqueen.com
www.visqueen.com

VISQUEEN ULTIMATE GAS BARRIER NF-500

BARRIER ABOVE SLAB BEAM & BLOCK FLOOR AT EXTERNAL MASONRY WALL

© Copyright reserved. This drawing may not be reproduced in part or amended without prior written permission.

VISQUEEN