
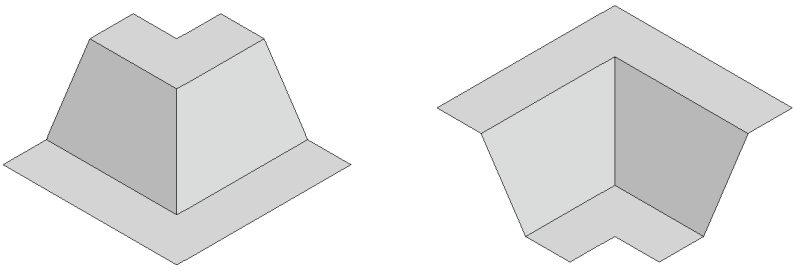
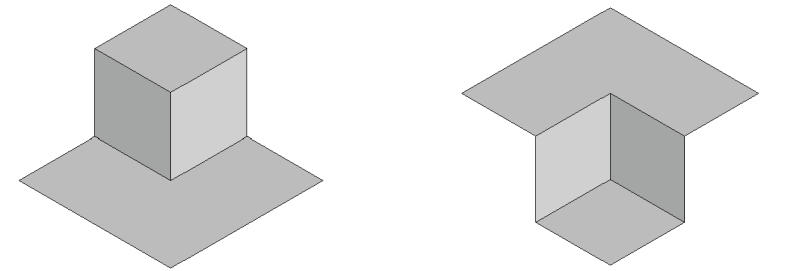
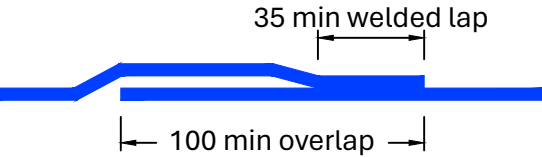


Key to materials:

1	Visqueen Zedex CPT High Performance Damp Proof Proof Course
2	Visqueen Ultimate Gas Damp Proof Course
3	Visqueen Vapour Check or Visqueen Vapour Barrier
4	VisqueenPro Double Sided Jointing Tape
5	Visqueen Gas Resistant Foil Lap Tape
6	Visqueen Gas Barrier
7	Visqueen Adjustable Z Vent & Airbrick
A	PFU-501 Preformed Units at corners
	
B	PFU-553 Preformed Units at corners
	
Gas Barrier Welded Joint	

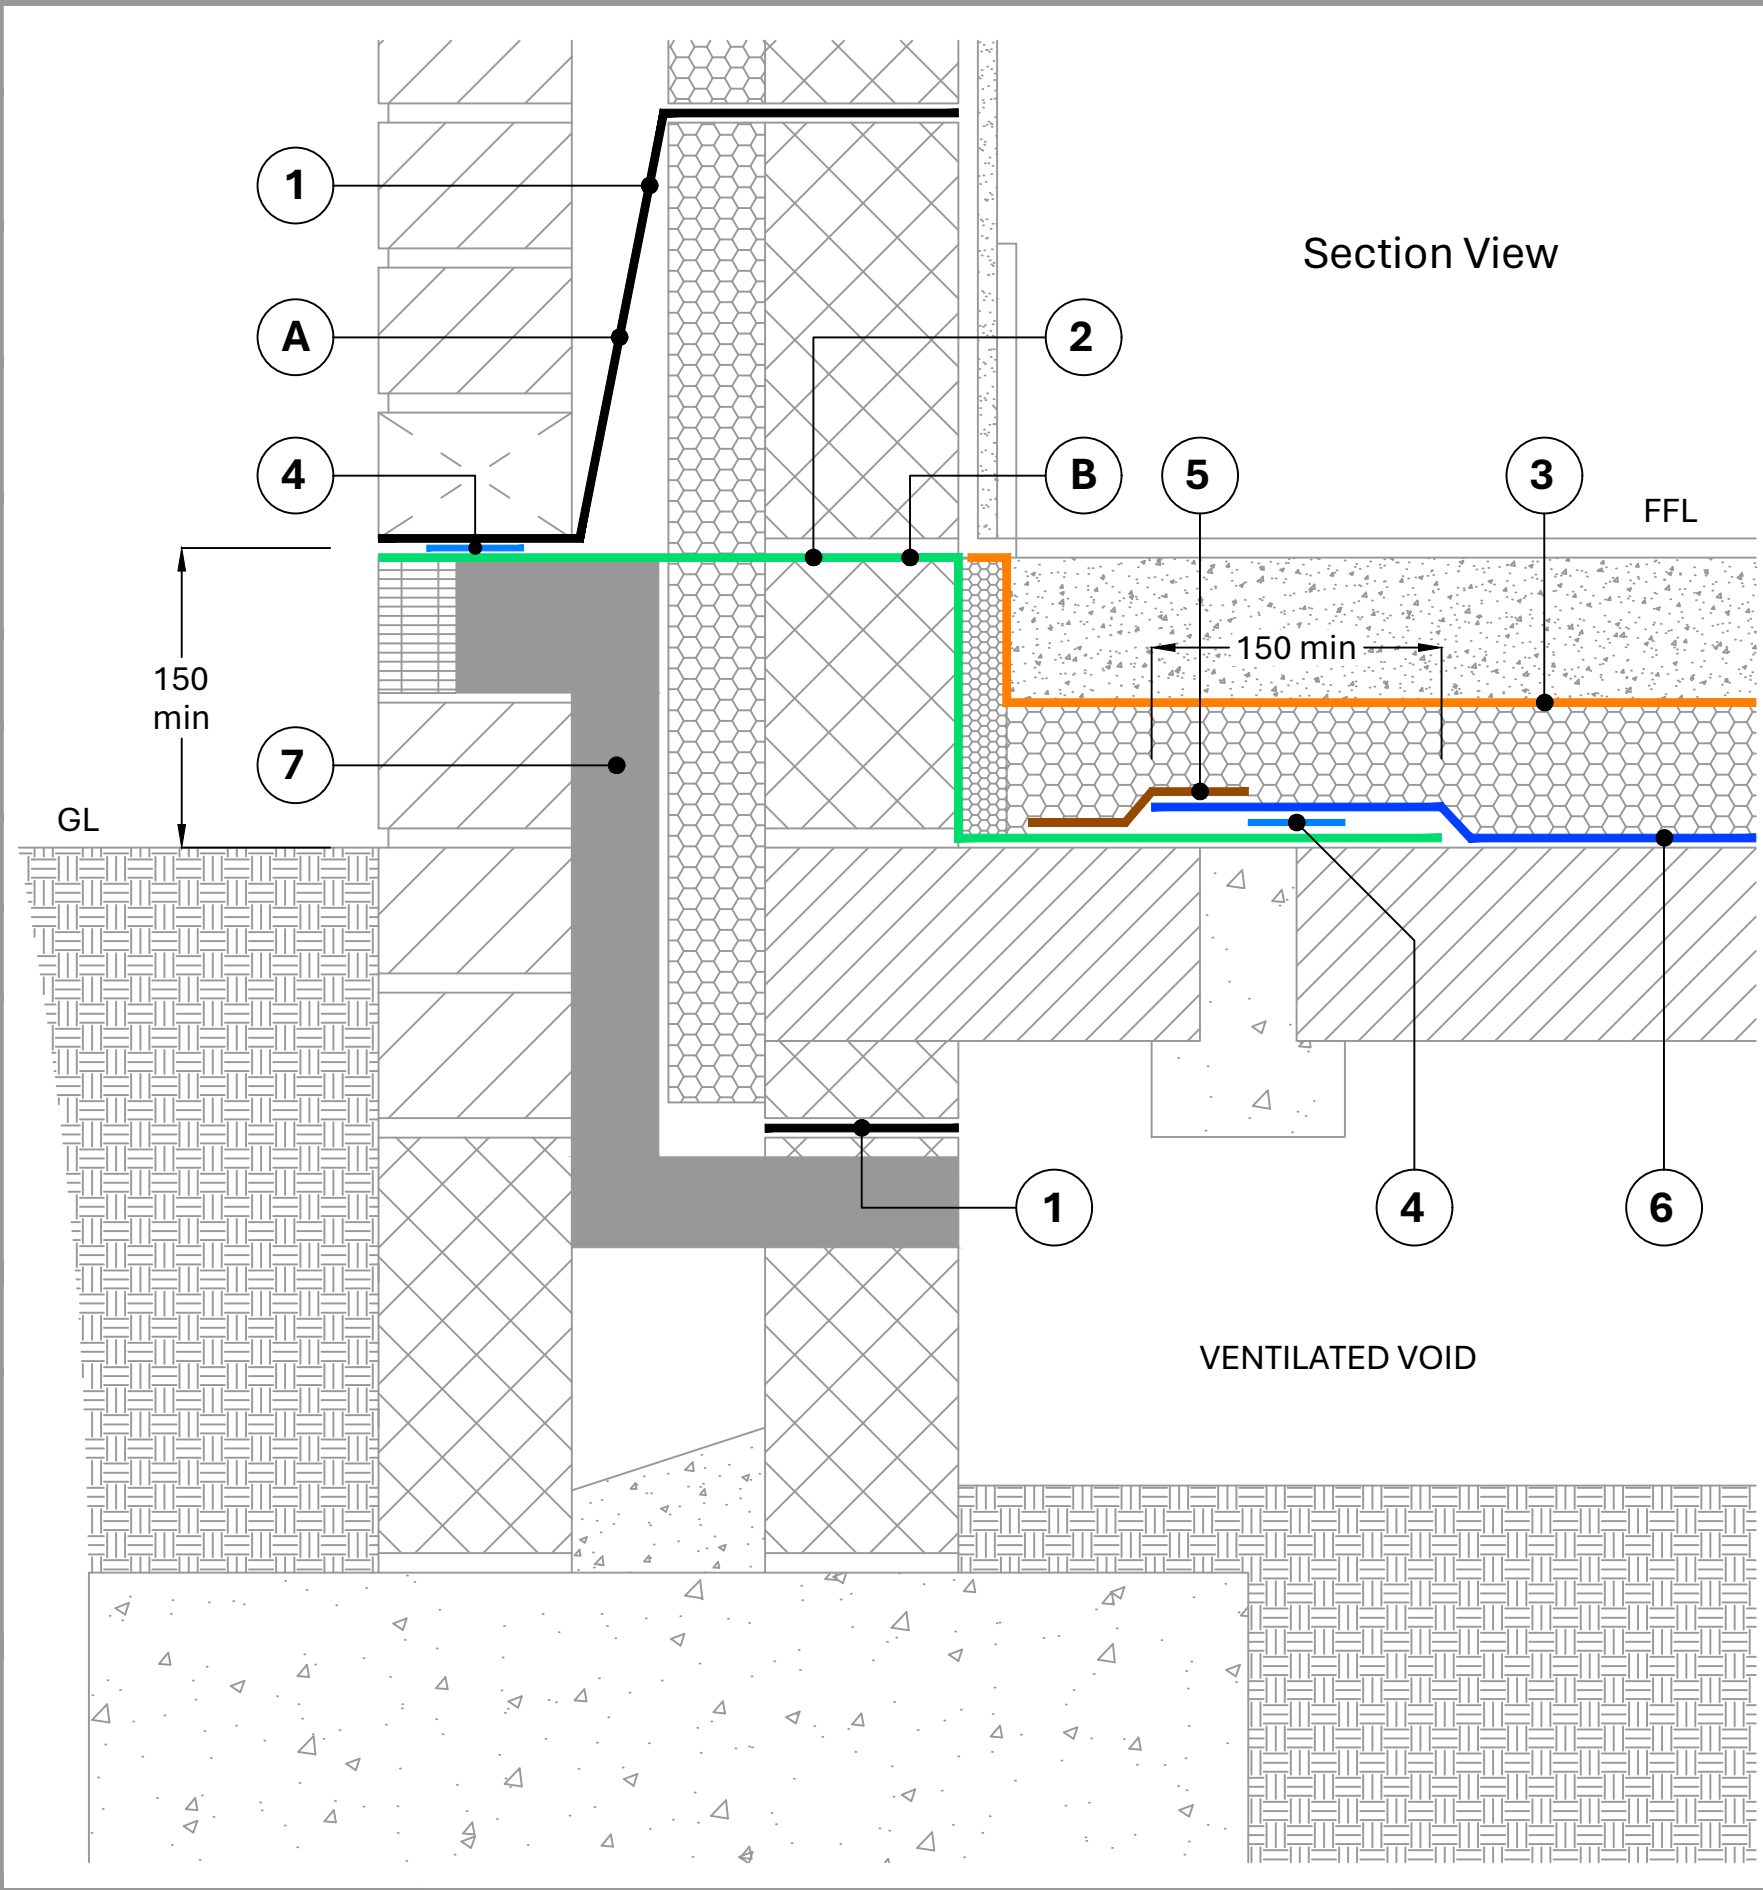

CRITICAL GUIDANCE NOTES

Visqueen Guidance Details are for illustration purposes only. It is the lead designer's responsibility to ensure Guidance Details are incorporated correctly into construction drawings.

Visqueen take no project design liability, or responsibility for the use of Guidance Details.

Drawing not to scale, use figured dimensions only. All figured dimensions are in millimetres.

British Standards are regularly updated. Visqueens' Guidance Details meet recommendations in place on date drawn.

Some Visqueen membranes can be installed with welded lap joints.

Visqueen Preformed Units are available to assist complex detailing, such as internal and external corners.

Contact Visqueen Technical Services for further information.

Guidance Detail

Drawing No: GB-04

Drawn by: JR

Approved: SD

Date drawn: September 2024

Visqueen provide a Contract Design Service where project specific drawings can be produced. Contact Visqueen Technical Services for further information.



Tel: 0333 202 6800
enquiries@visqueen.com
www.visqueen.com



BARRIER ABOVE SLAB, BEAM & BLOCK FLOOR,
EXTERNAL MASONRY CAVITY WALL AT
TELESCOPIC VENT LOCATION

© Copyright reserved. This drawing may not be reproduced in part or amended without prior written permission.



A Berry Global Brand