

Thankyou for buying your Edion Protect EV charging cable protector. Looked after sensibly it will give you many years of service.

Step 1 - Unpack and unroll



Remove from shipping box and unroll flat on the floor indoors in a warm place to remove any curve from being tightly coiled during shipping.

Step 2 - Fit Cable




Turn your Edion Protect upside down and starting at one end open the channel and start to insert your EV Cable.

Step 3 - Finish Cable Fit




Continue to open the channel and inserting the EV cable along the length until fully inserted.

Step 4 - Clip in Cable

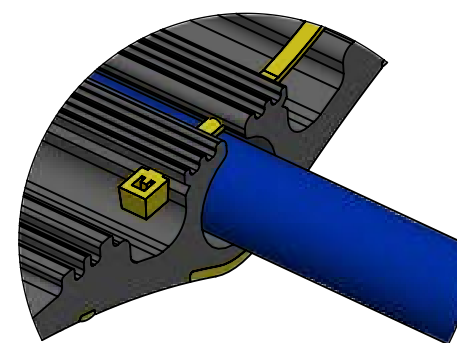


Starting at one end Insert a cable tie* through the hole, over the EV cable and through the opposite hole.

Step 5 - Fit Second Tie

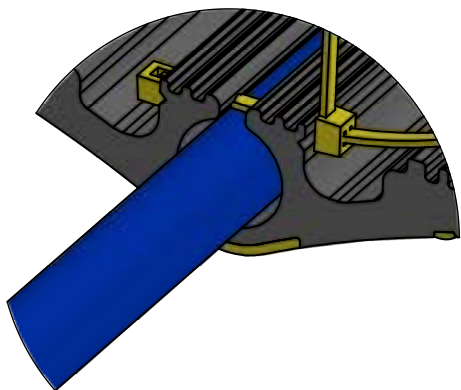


Using a second cable tie*, slide it along the one in Step 4 until it just nips up the channel as shown. Don't do this too tight otherwise the EV cable will not slide in the Edion Protect when rolled up.

Step 6 - Add Other Ties

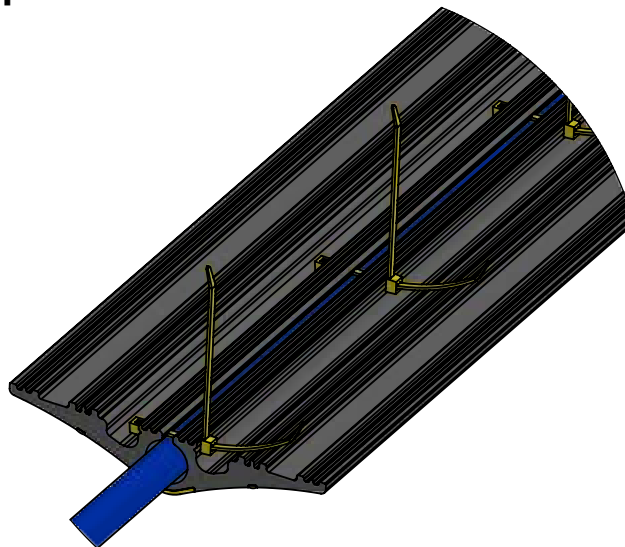

Add other pairs of cable ties* along the length of your Edion Protect as shown. Be careful not to make them too tight so that cable still slides in the channel.

Step 7 - Trim all Ties

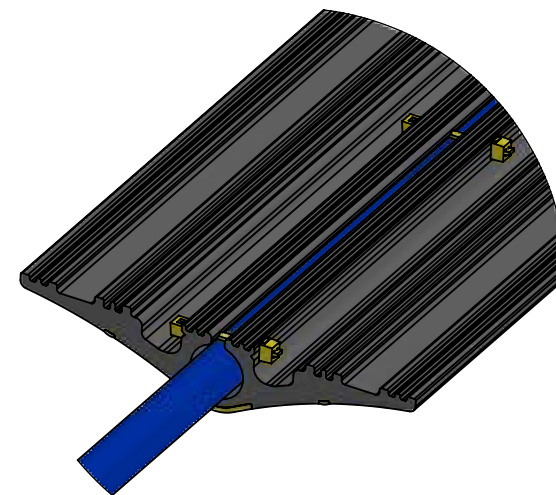

Cut the excess length from both cable ties* at each fixing point using wire side cutters or sharp scissors.

Step 8 - Position Edion Protect on Cable



Slide the Edion protect to the required position on your EV cable. Your Edion Protect is now ready for use.