

Parascreen Installation Manual Details

INSTALLATION SEQUENCE:




1. DETERMINE SCREEN HEIGHT REQUIRED IN RELATION TO PARAPET
2. USING STRING-LINE OR LASER LEVEL MARK BRACKET VERTICAL POSITION
3. SET UP CORNER AND OPENING PARASCREEN BRACKETS AS PER SITE LAYOUT DRAWING ALLOWING FOR OFFSET
4. USE PARASCREEN JIG TO SET BRACKET SPACING AS PER RULE IN SCREENS INSTALLATION MANUAL Step 4&5
5. FIT CORNER AND OPENING POSTS INTO BRACKETS AND FIX WITH 6 x 20mm tek INTO PARASCREEN BRACKET
6. SEE SCREENS INSTALLATION MANUAL FROM Step 9 FOR SCREEN SLAT/LOUVRE AND ACOUSTIC PANEL FITTING



Scan for help video




Screen Install Manual

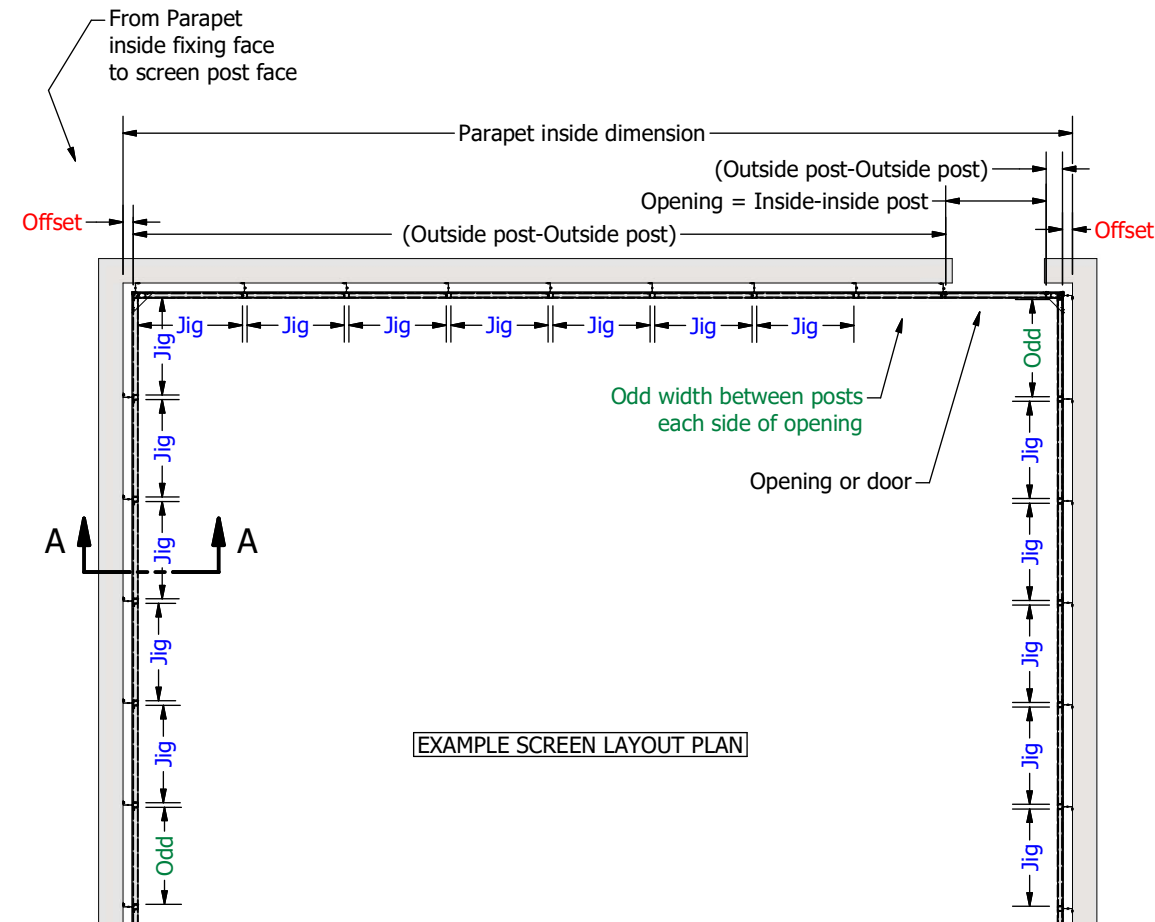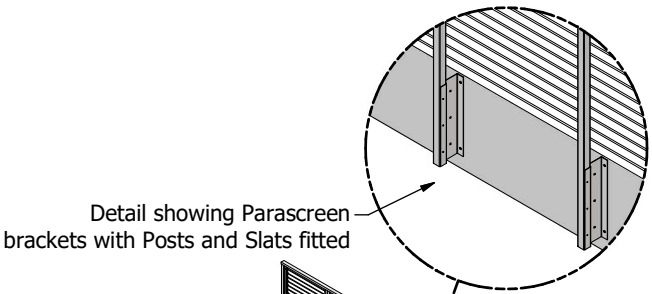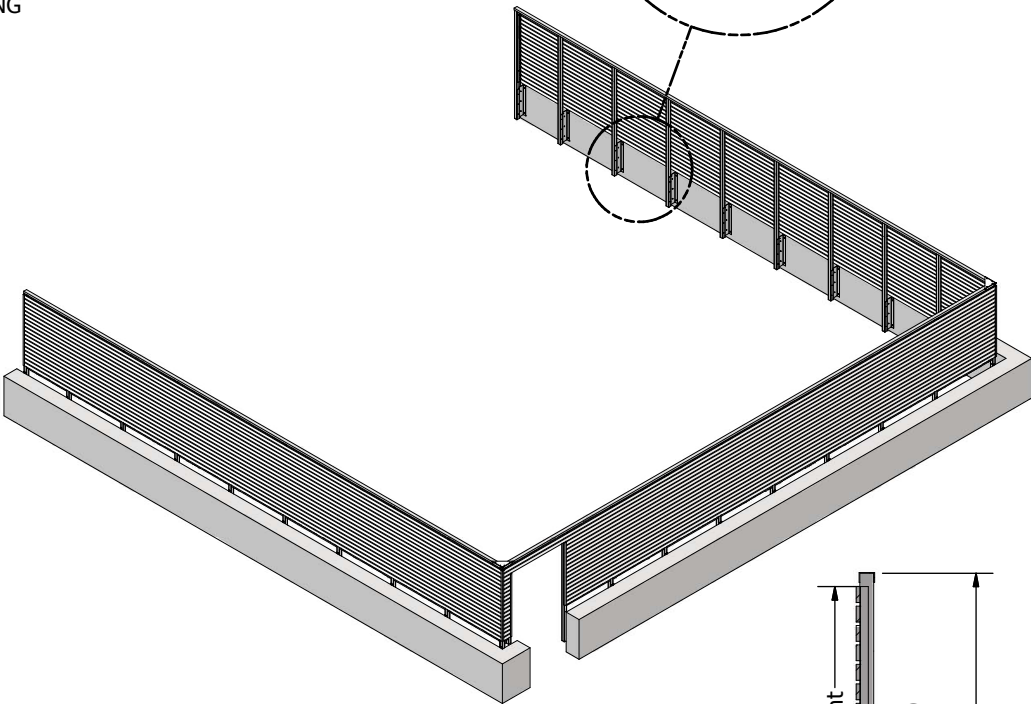

Parascreen Jig

Parascreen bracket

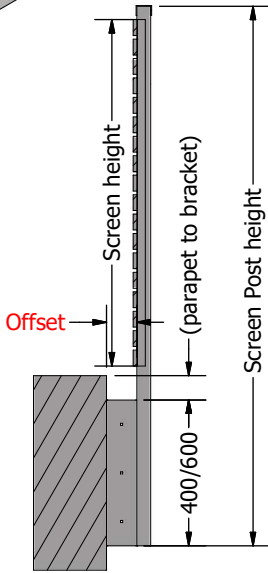

SECTION A-A