


DETAILING TO DRY PACK - FOR DELTA MS CAVITY DRAIN SYSTEM

1. Existing Masonry Wall
2. Dry Pack
3. KÖSTER Repair Mortar Plus
4. KÖSTER NB1 + SB Bonding
5. KÖSTER Polysil TG500 Anti-Lime Coating
6. DELTA MS 500
7. Concrete Pin

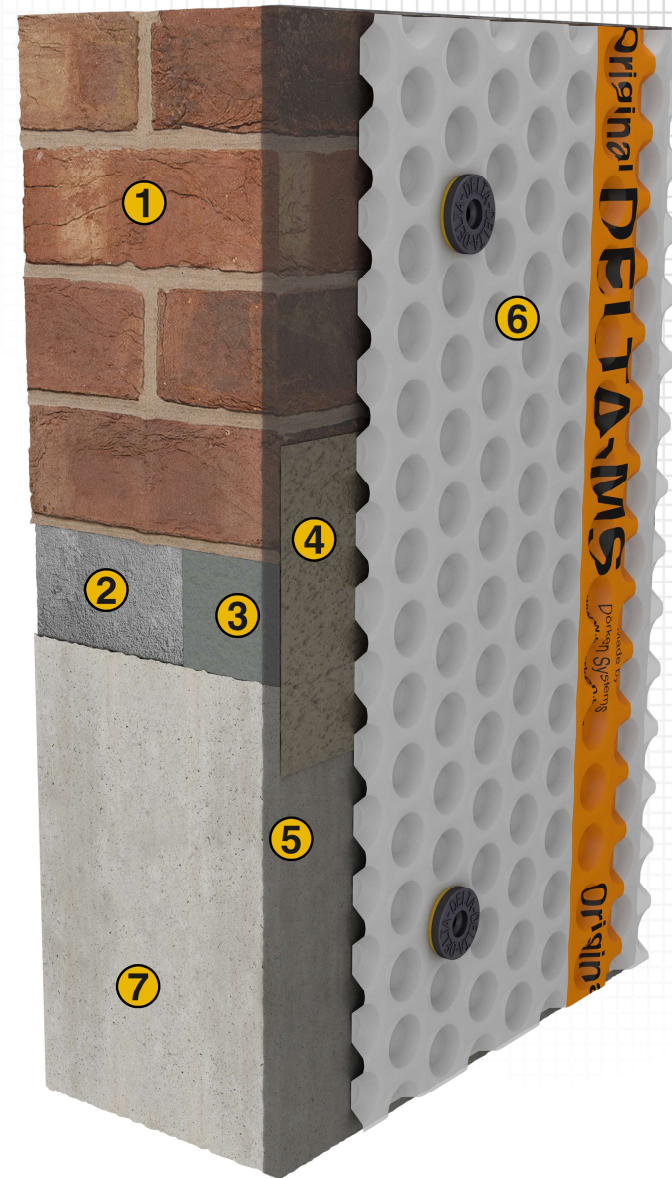

Drawing Note: This drawing is for illustrative purposes only. Drawing is NOT to scale. All installations to be carried out in strict accordance with manufacturer's installations instructions.

For further assistance contact Delta Technical on 01992 523 523 or email technical@deltamembranes.com