



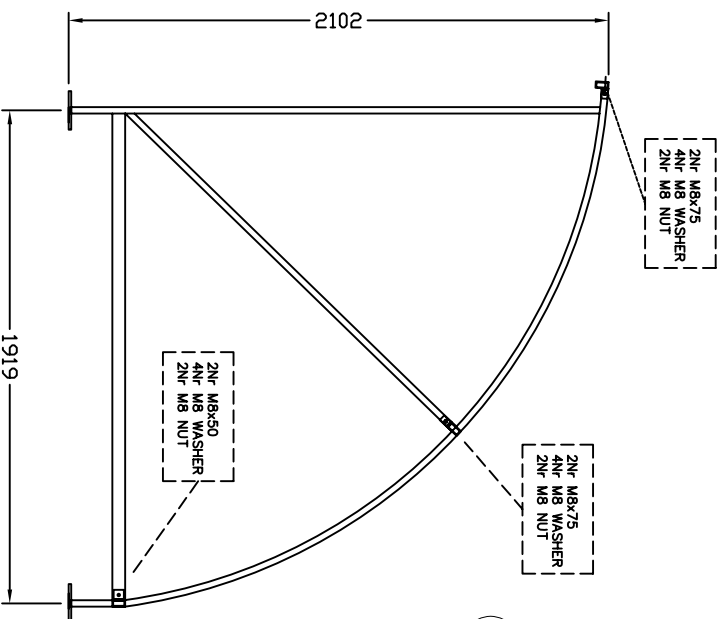

SIDE ELEVATION (SECTION)

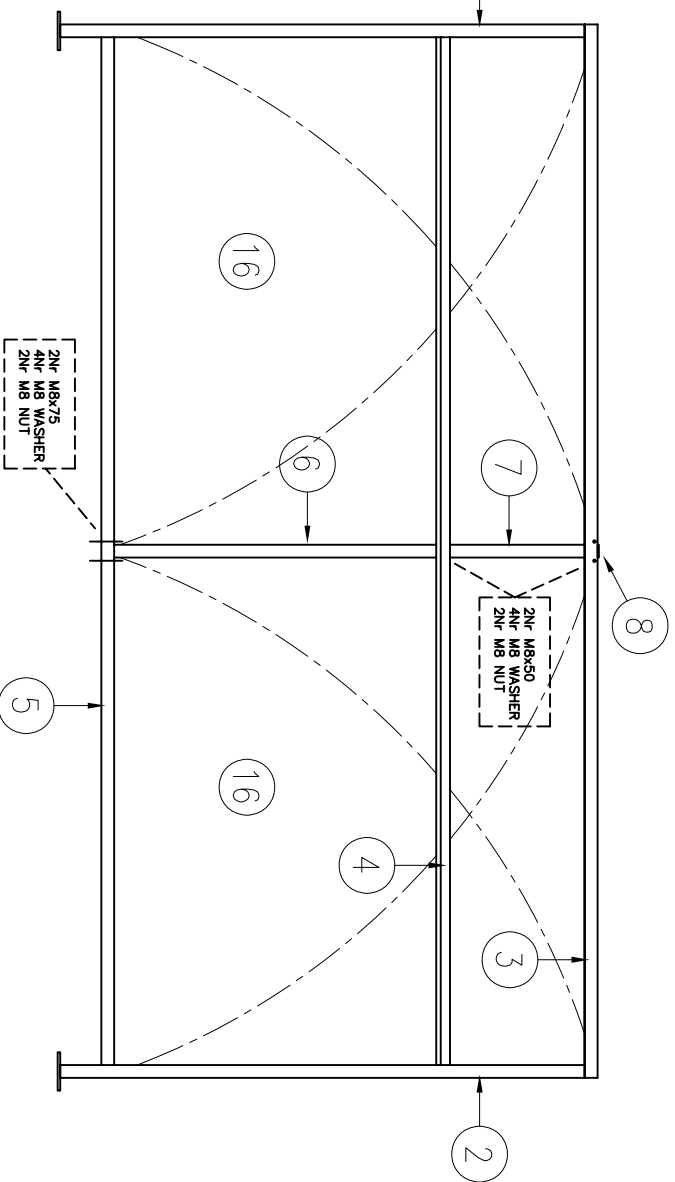

FRONT ELEVATION

Assembly instruction
for 10 and 8 bike only

ITEM	Drawing	DESCRIPTION	LENGTH MM	QTY	COMMENTS
1		LH END FRAME		1	
2		RH END FRAME		1	
3		TOP PURLIN		1	
4		MID PURLIN		1	
5		BOTTOM PURLIN		1	
6		LOWER TRIMMER		1	
7		UPPER TRIMMER		1	
8		GLAZING STRIP		1	
9					
10		HEX SCREW M8 X 75 ZP		6	
11		HEX SCREW M8 X 50 ZP		6	
12		M8 NUT ZP		12	
13		M8 PLAIN WASHER ZP		24	
14		M12 SHIELD ANKER		16	NOT SUPPLIED
15		5.5X25MM TEK SCREW ZP		100	
16		PET END ROOF SHEET		2	
17		PET INT. ROOF SHEET		N/A	
18				N/A	
19		PET SIDE END PANEL		N/A	
20		5.5X25MM TEK SCREW ZP		N/A	WITH ITEM 19

© COPYRIGHT 2010
THIS DRAWING MUST NOT BE USED WITHOUT THE WRITTEN CONSENT OF:
URBANFAB
Pennywell Industrial Estate, Sunderland, SR4 9EN
Tel: 0191 534 3211 Fax: 0191 534 1214
Email: sales@urbanfab.com www.urbanfab.com

NOTES:
1. ALL DIMENSIONS ARE IN MILLIMETRES UNLESS OTHERWISE STATED.
2. DO NOT SCALE.
3. REMOVE ALL BURRS, SWarf AND SHARP EDGES
4. CLEAN ALL WELDS, NO SPATTER, NO SLAG.
6. ALL WELDS TO BE 6mm FILET UNLESS OTHERWISE STATED

SCALE		No.		REVISION		DATE		TITLE	
1st ANGLE PROJECTION		[A]	-					OXFORD ECO MODULE - GA	

	1st ANGLE PROJECTION				PROJECT	OXFORD ECO CYCLE SHELTER
	[b]	-				
	[c]	-				
	[d]	-				

DRAWN	DATE	[E]	-	DRG. No.	OXFO-ECO-001	REV.	[-]
		F	-				