



West Mosley Street

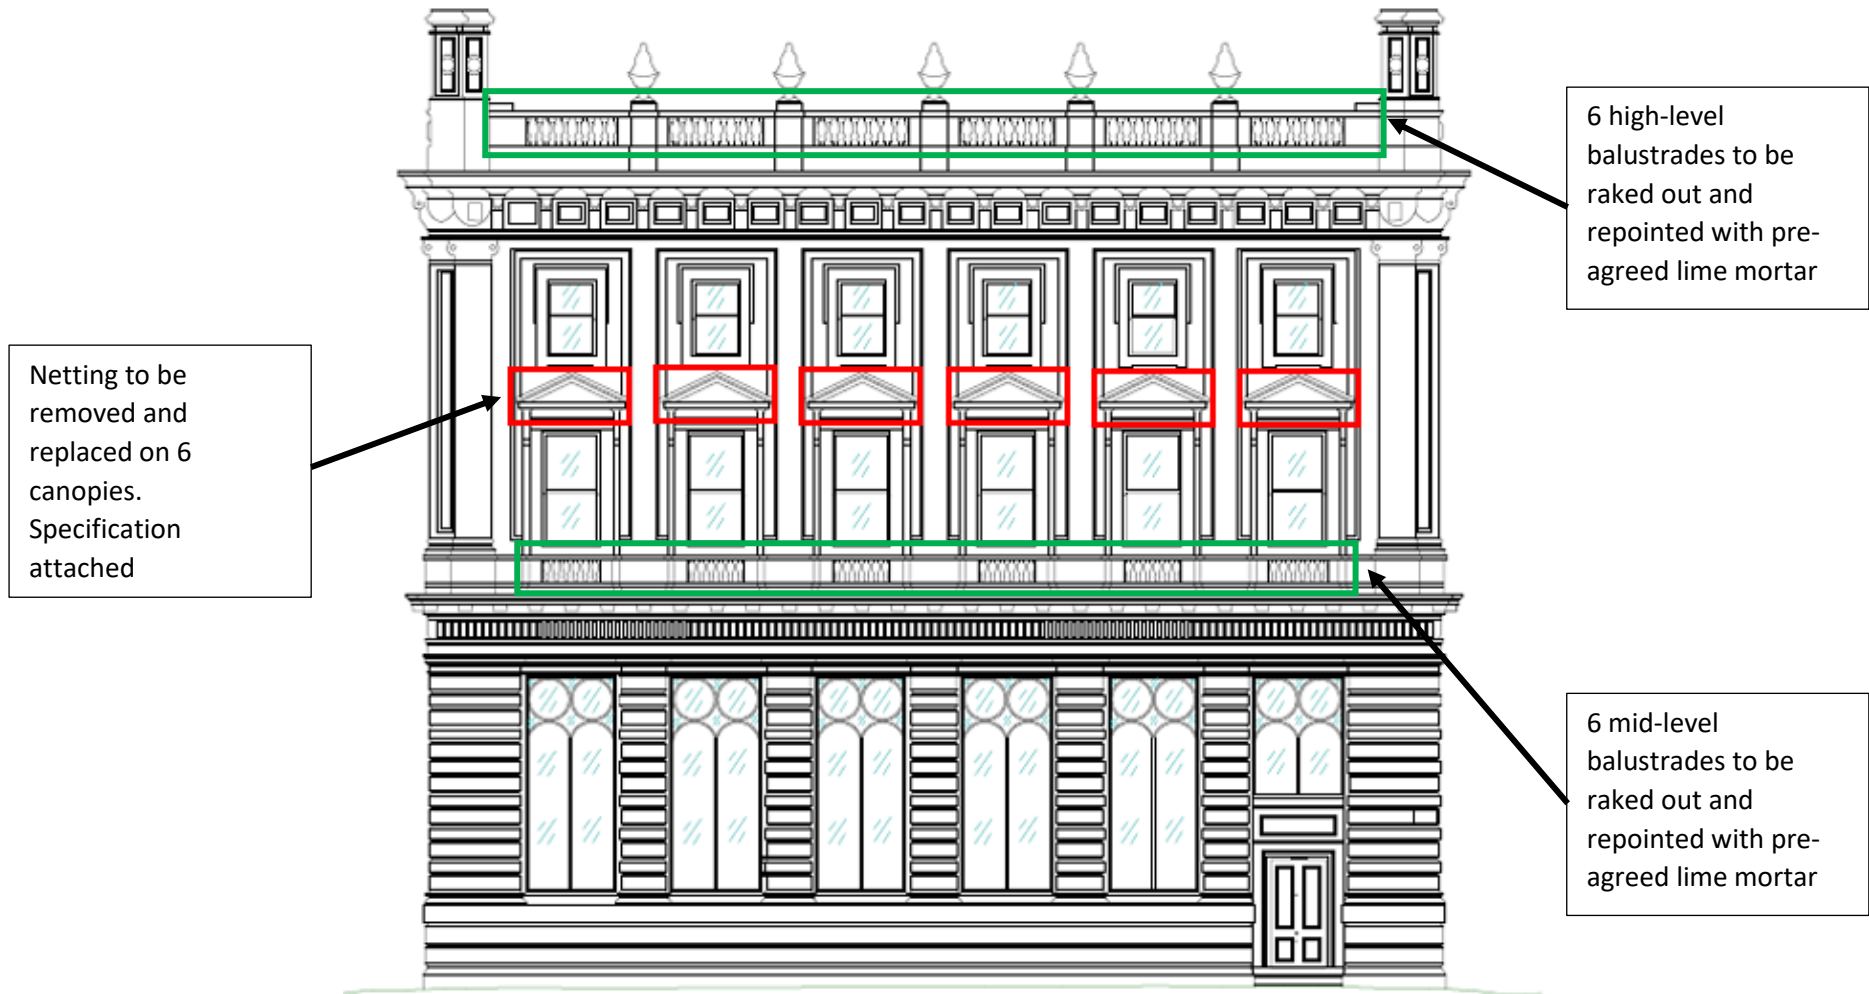

York Street




Mosley Street

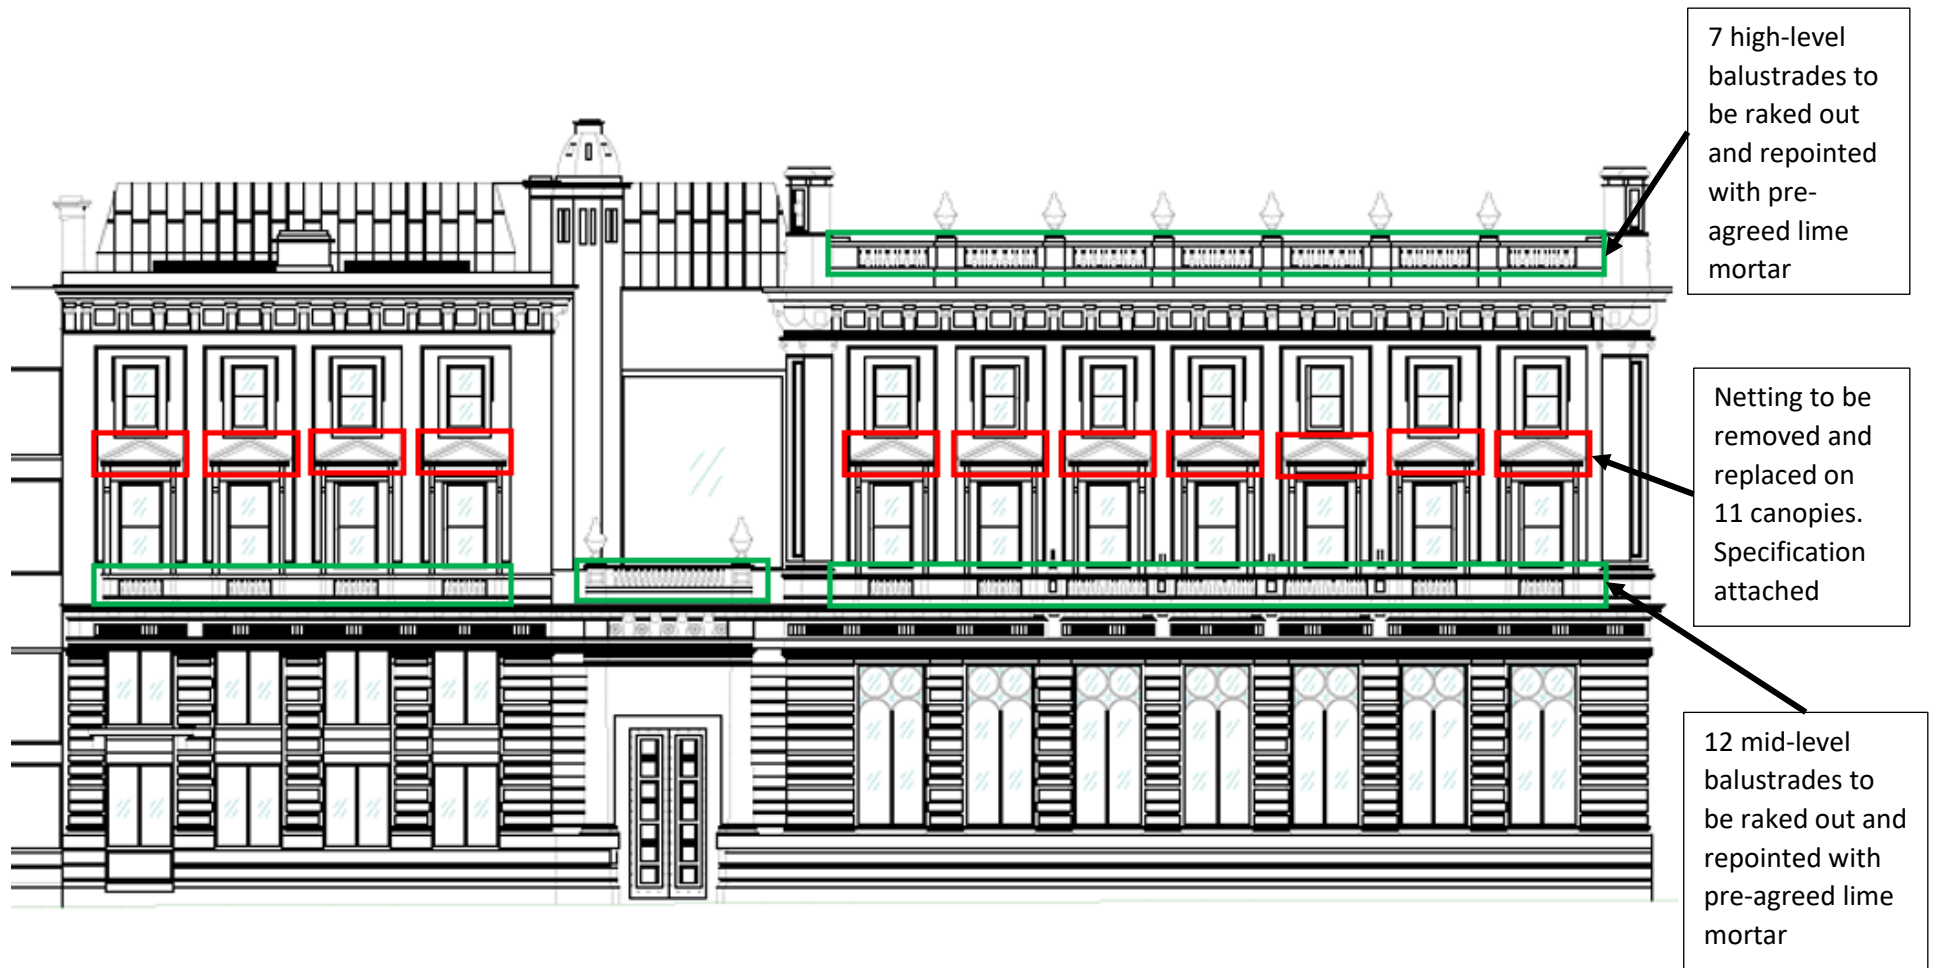

38-42 Mosley Street

Netting methodology

- Drill hole into the middle of the stone canopies (using a masonry drill), one at each point of the triangle (picture attached for reference)
- Remove the existing corroding fixings and clean the area with a soft brush
- Apply a lime mortar repair to the holes left after the old fixings have been removed
- Use chemical anchor resin to secure stainless steel fixings into the wall in the new drill holes
- Feed galvanised wire rope through the new fixings and crimp at both ends with a copper ferrule. Insert a turnbuckle between the two ends and tighten manually until there is enough tension on the galvanised wire for the net to be secured
- Clip the net onto the wire rope with hog rings and pliers

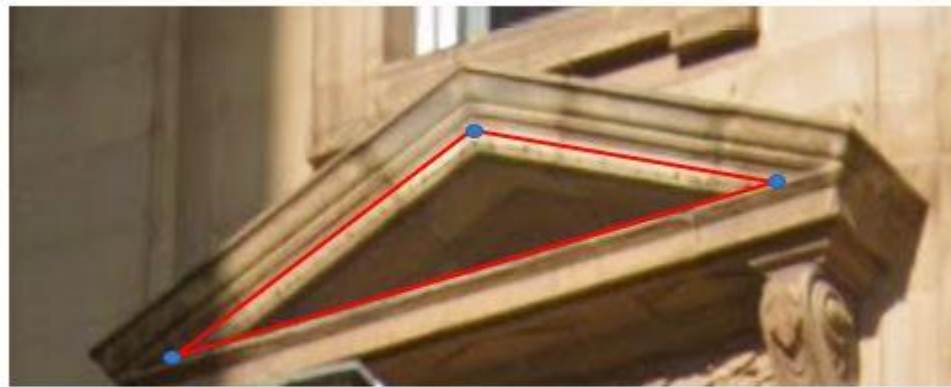

- Proposed drill holes
- Proposed wire rope location