
GLADIATOR CYCLE

BASE INSTRUCTIONS
Flat and firm base. Recommended: concrete, tarmac or paving flags.
Min. distance from walls/ shrubbery: 1000mm.
Min. base size (WxDxH) 2410mm x 3790mm x 50mm.


LEVELING THE UNIT
Correctly level the constructed unit using the shims (ZCOMPPLAS) provided prior to fixing the unit to the ground. Slide the packing pieces under the corners of the unit base as required until an equal gap has been achieved around the door allowing for its smooth operation and alignment.


It is always recommended to anchor the unit to the gorund. Drill through the four holes in each of the base of the unit using 6mm dia masonry drill to a depth of 70mm. Screw in the anchor fixings. (These have a self cutting thread). If not anchoring the unit, fit the self seal plugs BEFORE BUILDING to block the fixing holes from underneath. **Please note, product must be bolted down to comply with LPS1175**

TOOLS REQUIRED
Power driver POSI-DRIV screwdriver, 6mm dia. masonry drill and a 10mm socket or spanner.

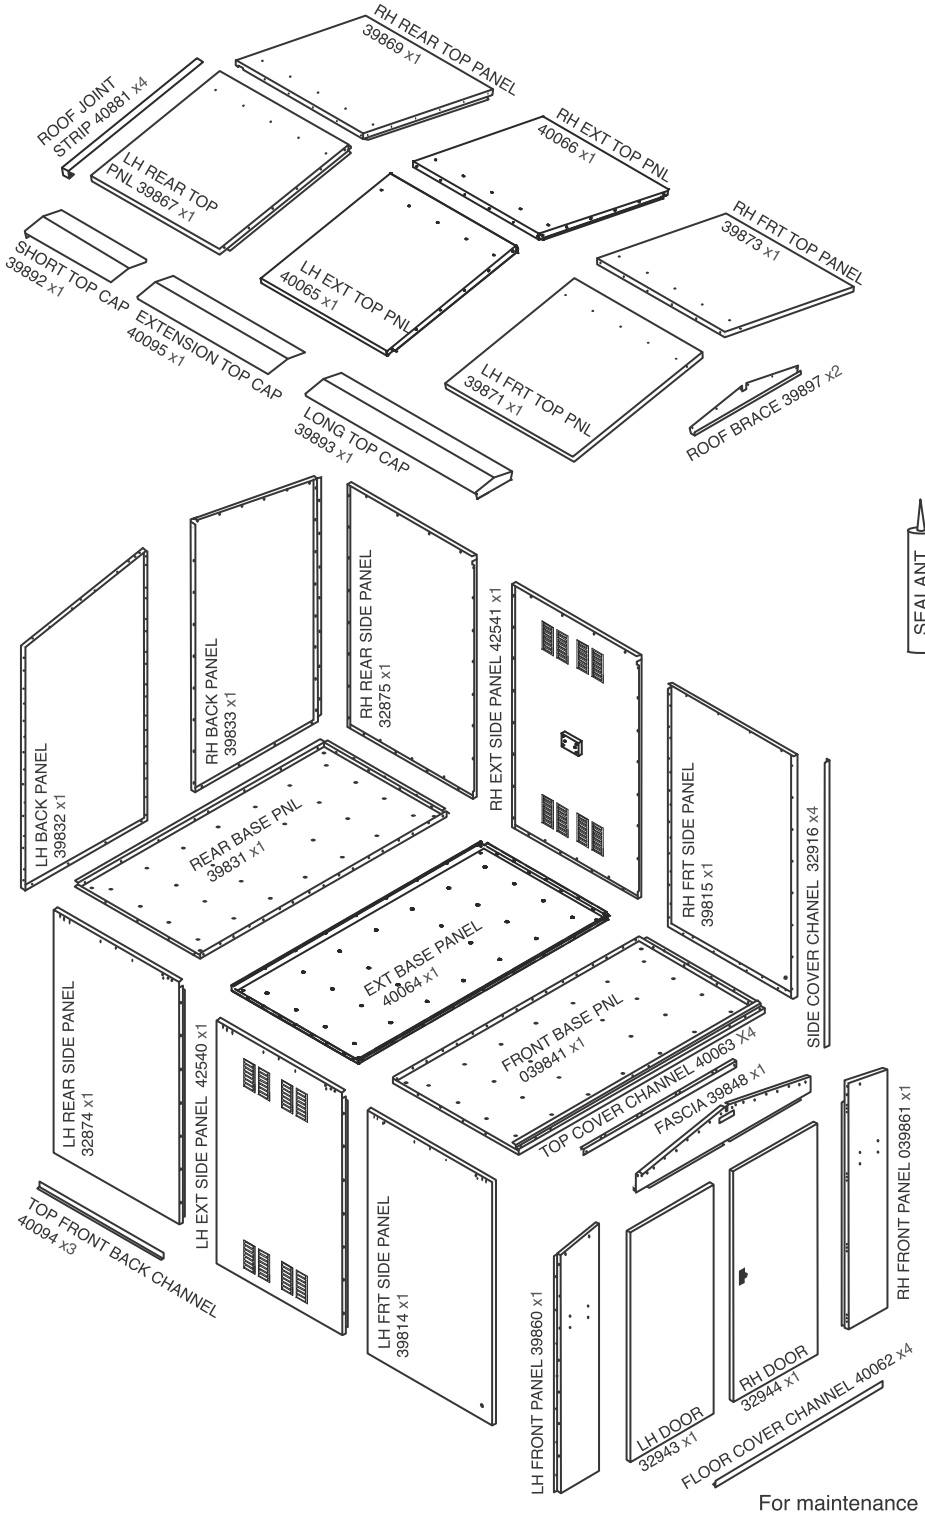



Warning: some panels may weigh over 20Kg Beware of manual handling

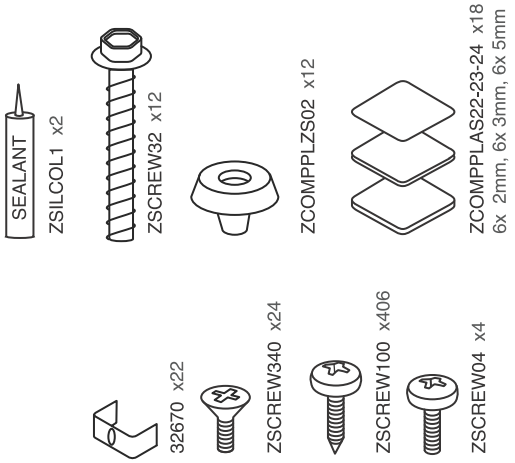



Warning: Please keep this key card safe! Refer to if replacement key is required.

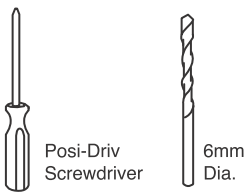


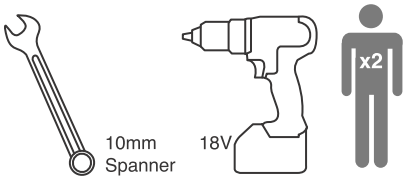

For maintenance instructions of this product visit www.asgardsss.co.uk


PLEASE NOTE ALL SCREWS ARE FIXED FROM THE INSIDE

1

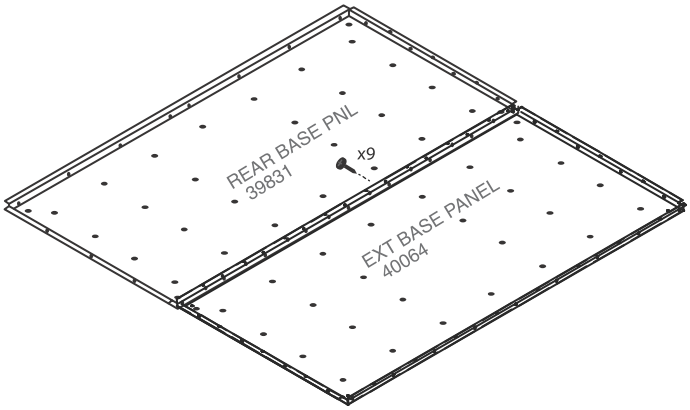


x9

2! IF YOU HAVE AN OPTIONAL RAMP, PLACE UNDERNEATH FRONT BASE PANEL AT THIS STAGE

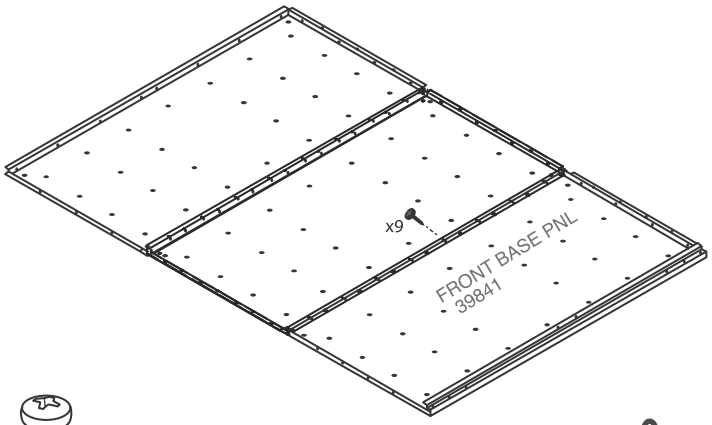


x9

3

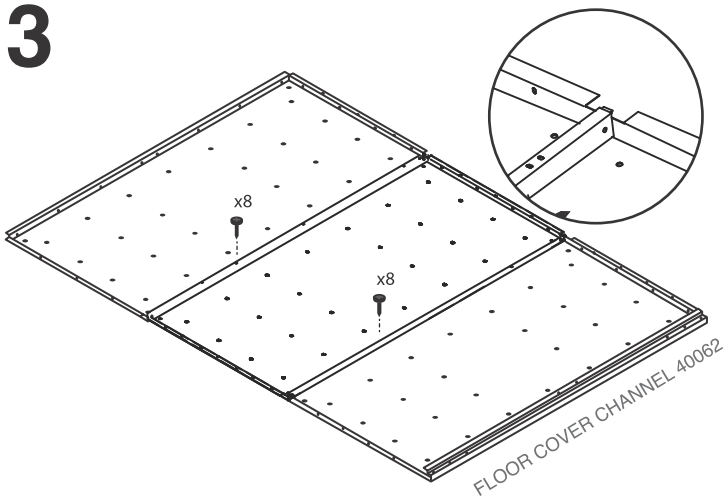


x16

4

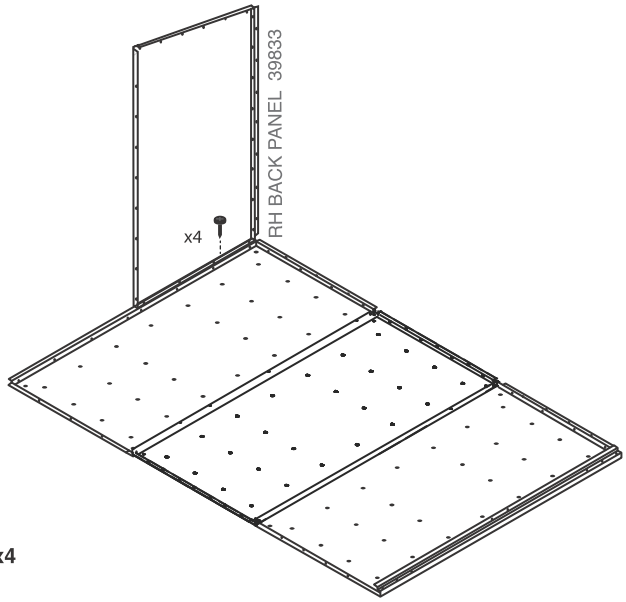


x4

5

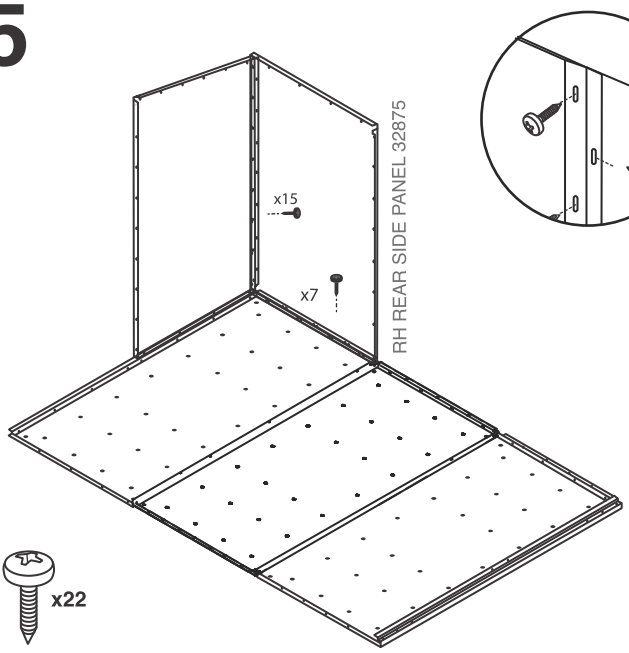

x22


6

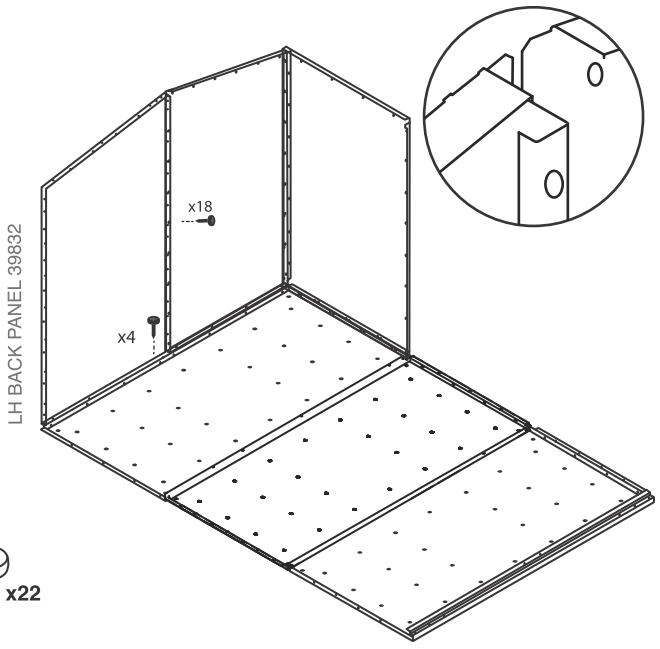

x22


PLEASE NOTE ALL SCREWS ARE FIXED FROM THE INSIDE

7

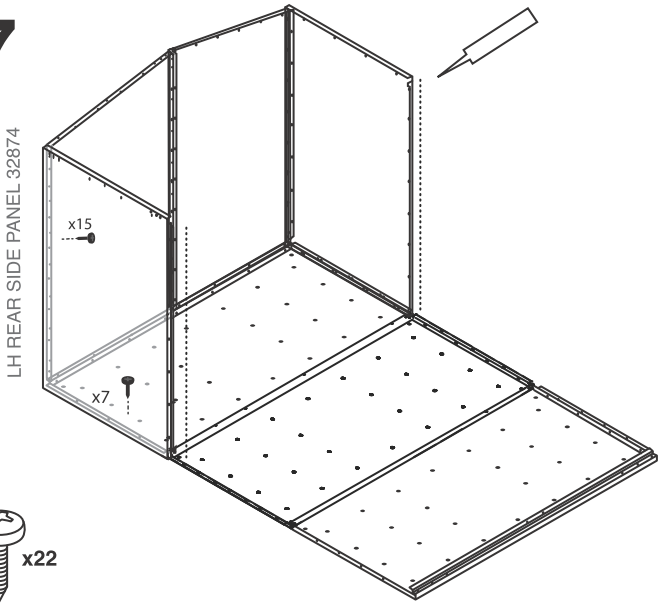


x22

8

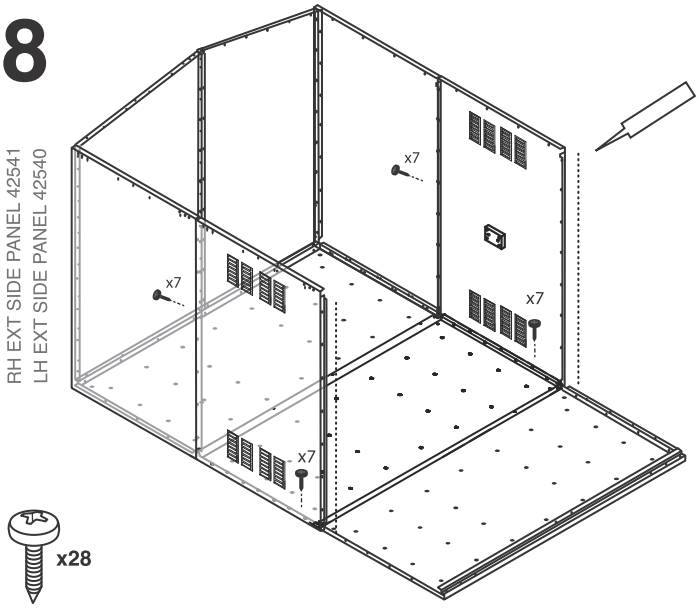


x28

9

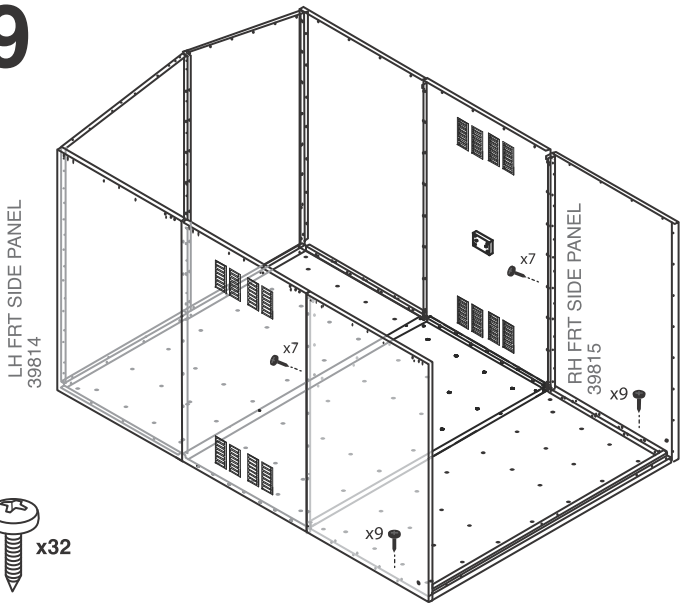


x32

10

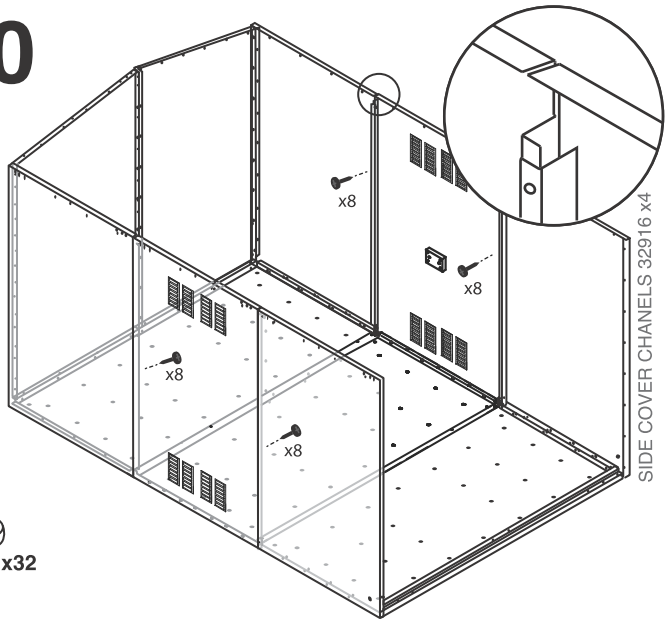


x32

11

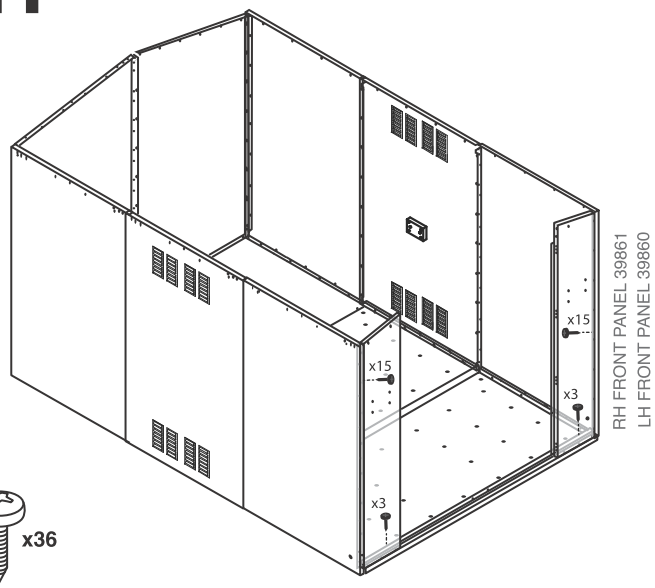

x36


12

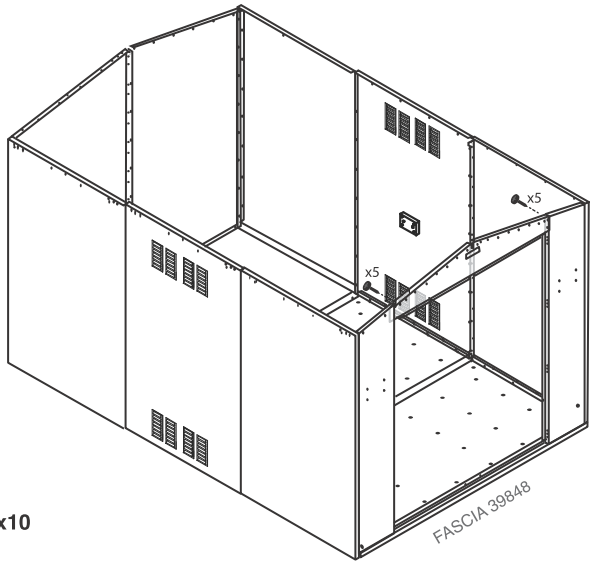


x10

PLEASE NOTE ALL SCREWS ARE FIXED FROM THE INSIDE

13

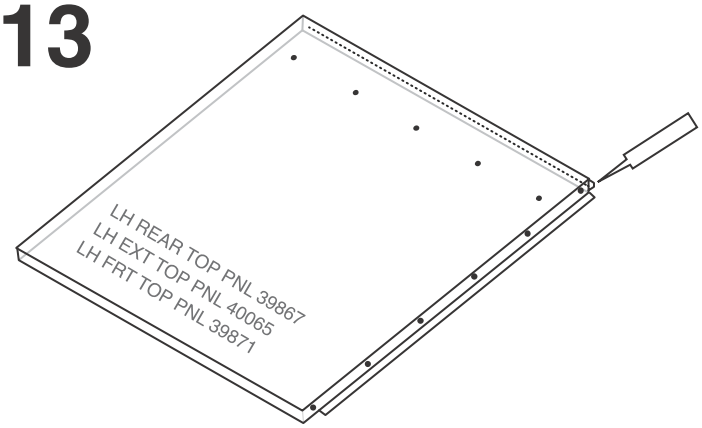


14

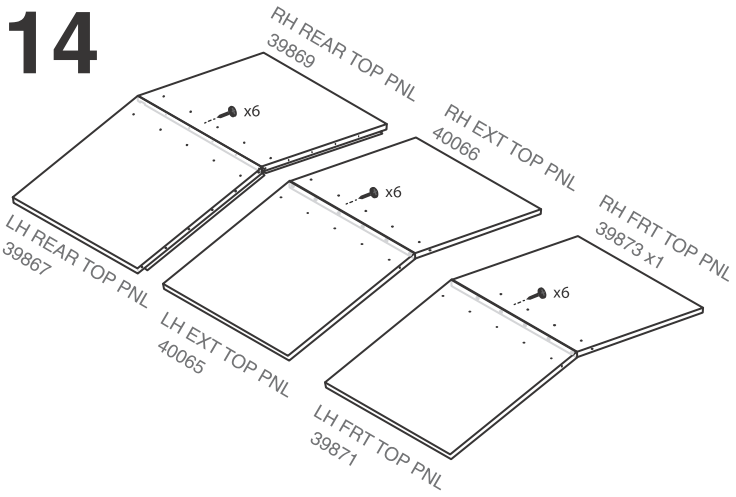


x18

15

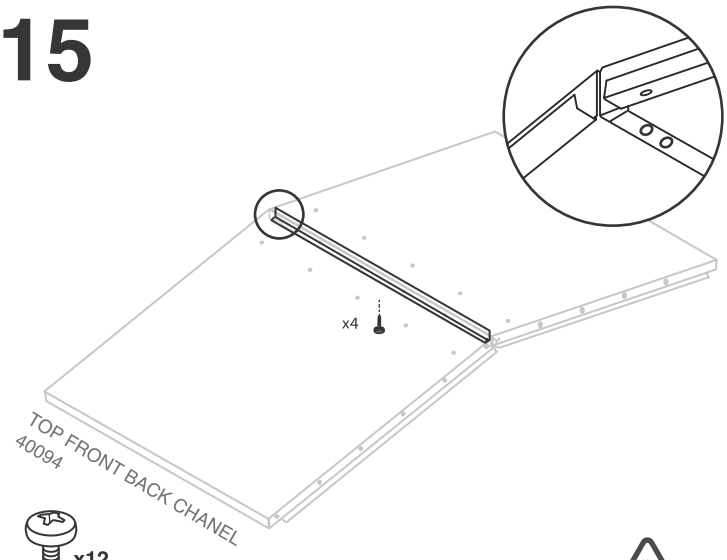


x12

16

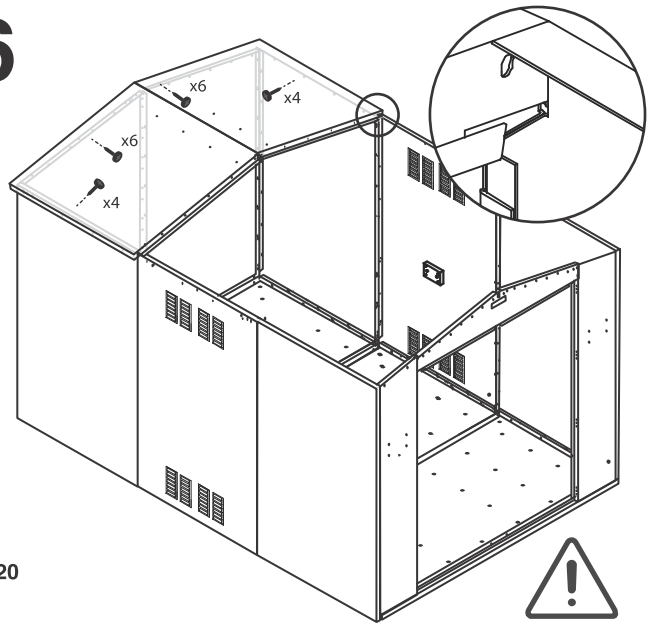


x20

17

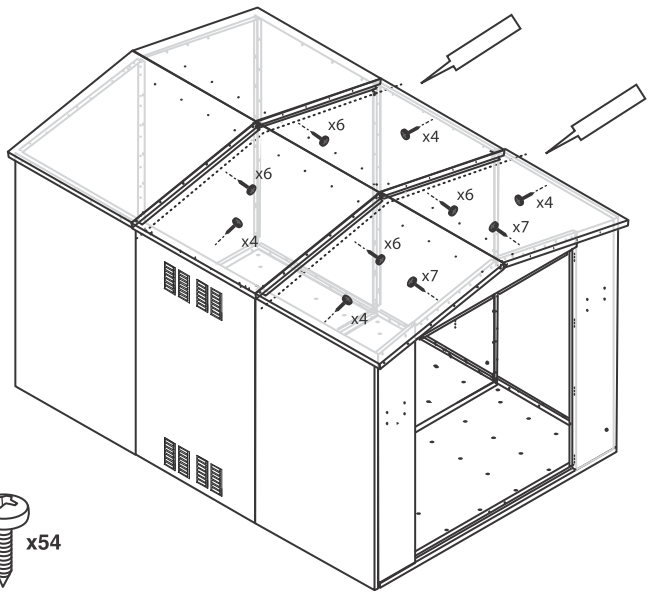

x54


18

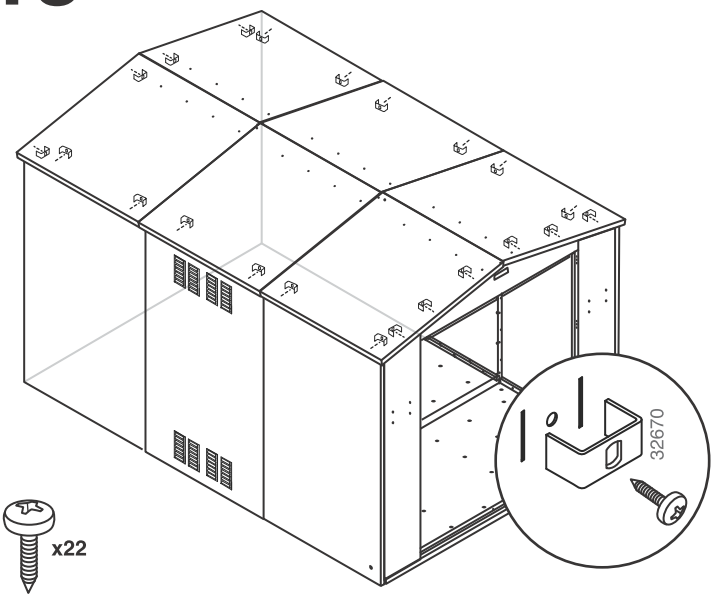

x22


PLEASE NOTE ALL SCREWS ARE FIXED FROM THE INSIDE


19

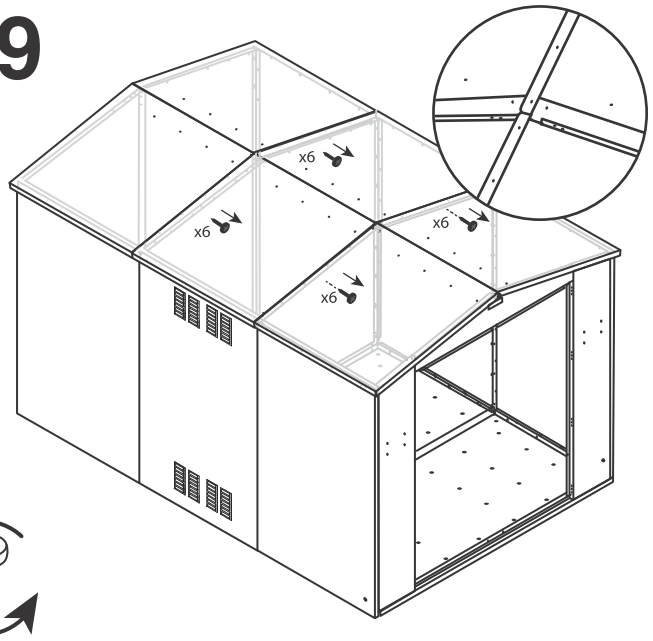





20

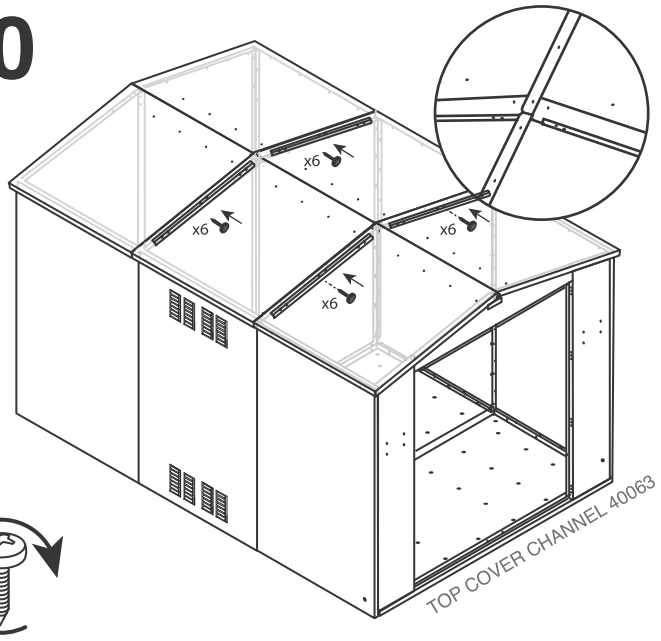

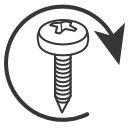



21

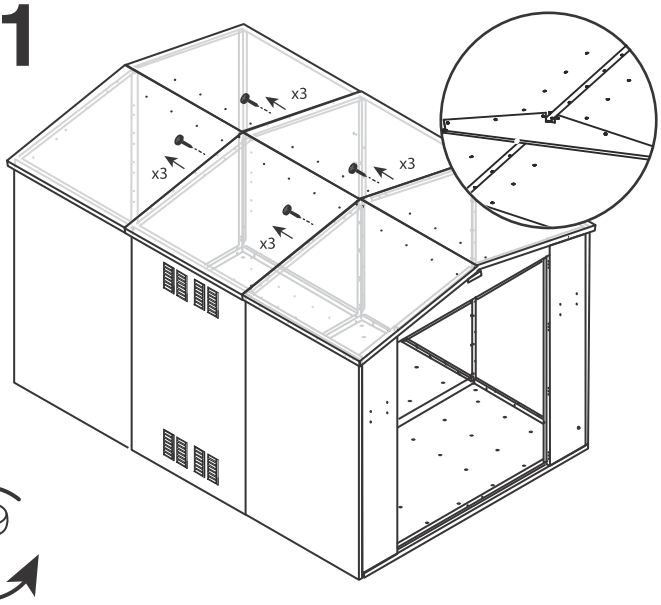

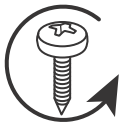


22

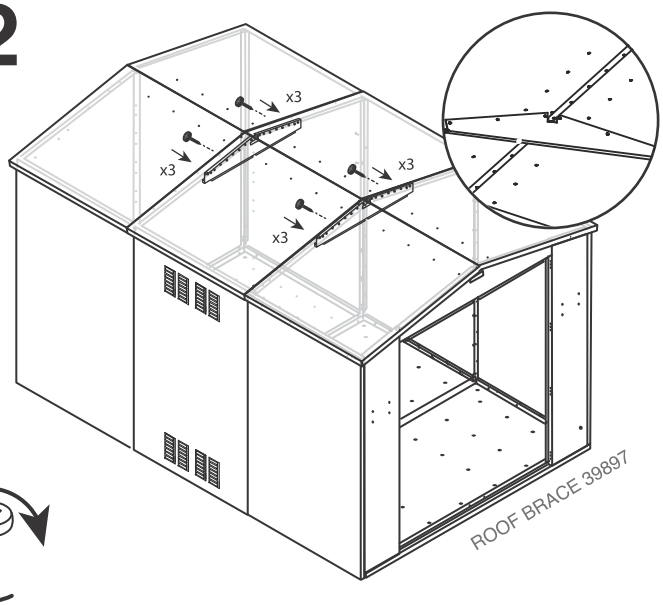

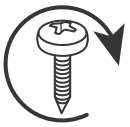


23

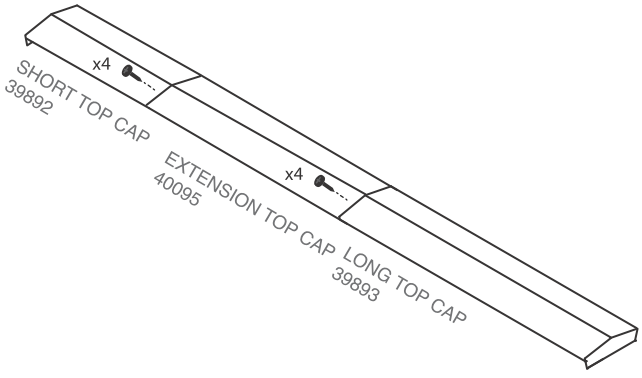





24!

NO SCREWS REQUIRED
TOP END OF STRIP TRAPPED UNDER TOP CAP

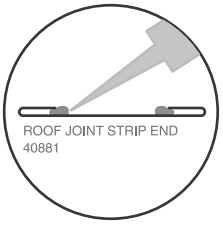


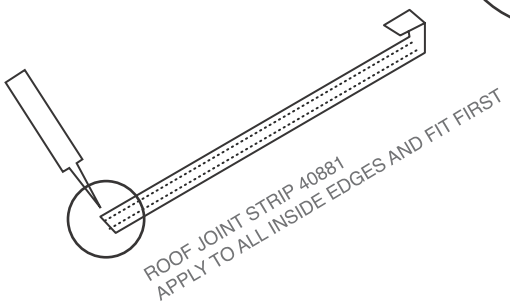


25

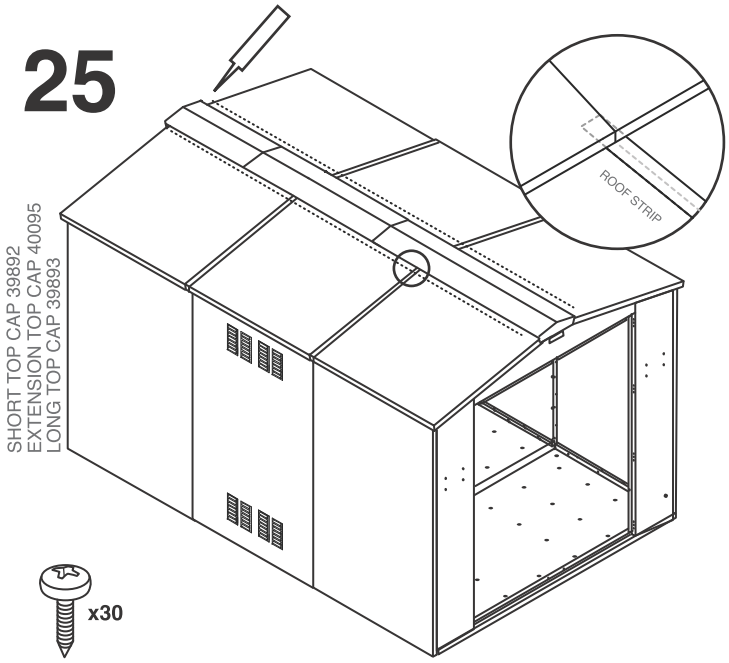


26

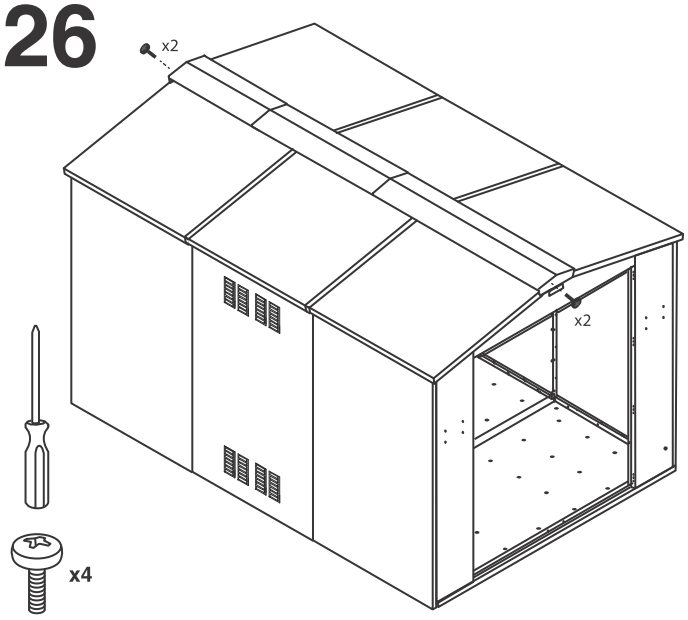


27

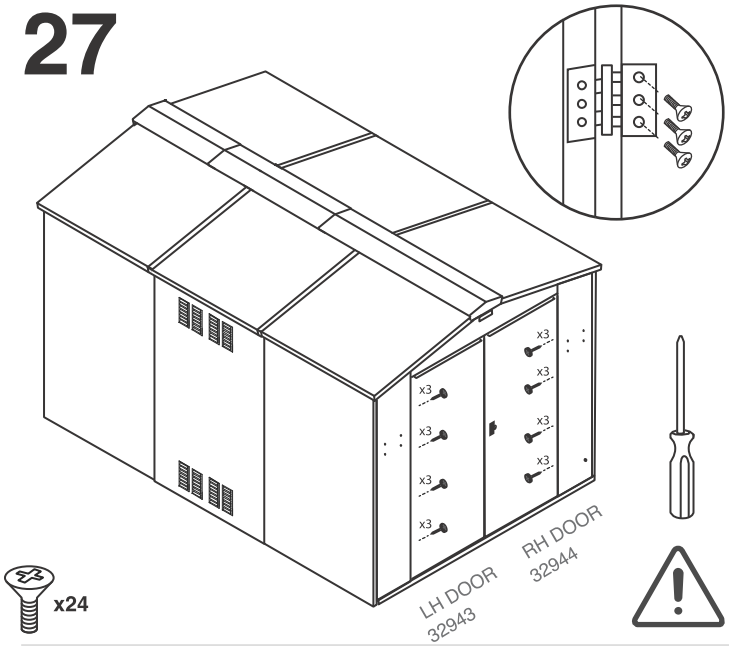

28! LEVEL SHED UNTIL DOORS ALIGN USING ZCOMPPLAS AS SUITABLE

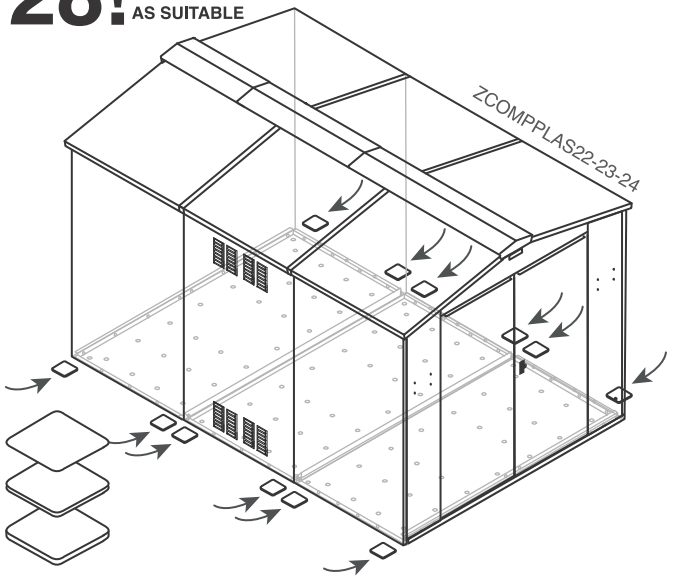

29

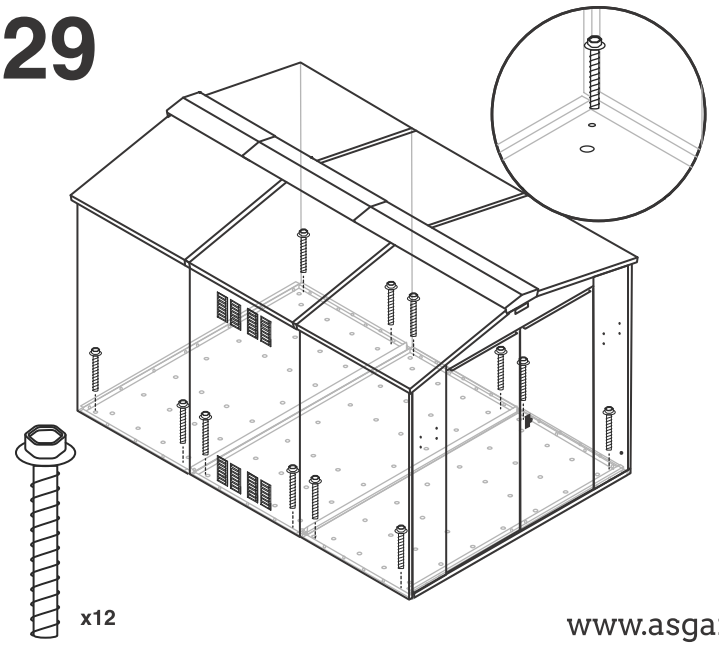

www.asgardsss.co.uk

Maintenance Instructions for Cycle Storage.

- **Regular Cleaning:** Wipe down the exterior and interior with a damp cloth to remove dirt and debris. Avoid harsh chemicals that could damage the powder coating.
- **Check Locks and Hinges:** Periodically lubricate the locks and hinges with a suitable lubricant to ensure smooth operation and prevent rust.
- **Inspect for Damage:** Look for any signs of wear, dents, or corrosion. Address minor issues promptly to prevent them from worsening.
- **Floor Care:** The shed features an OSB board floor. Keep it dry and clean to avoid moisture damage.
- **Weather Protection:** Ensure water does not pool around the base by maintaining proper drainage to protect the shed's structure.
- **Security Checks:** Regularly verify that the shed is securely bolted down as required for LPCB compliance.