


**Princess Street Tower
Timber repairs to roof**

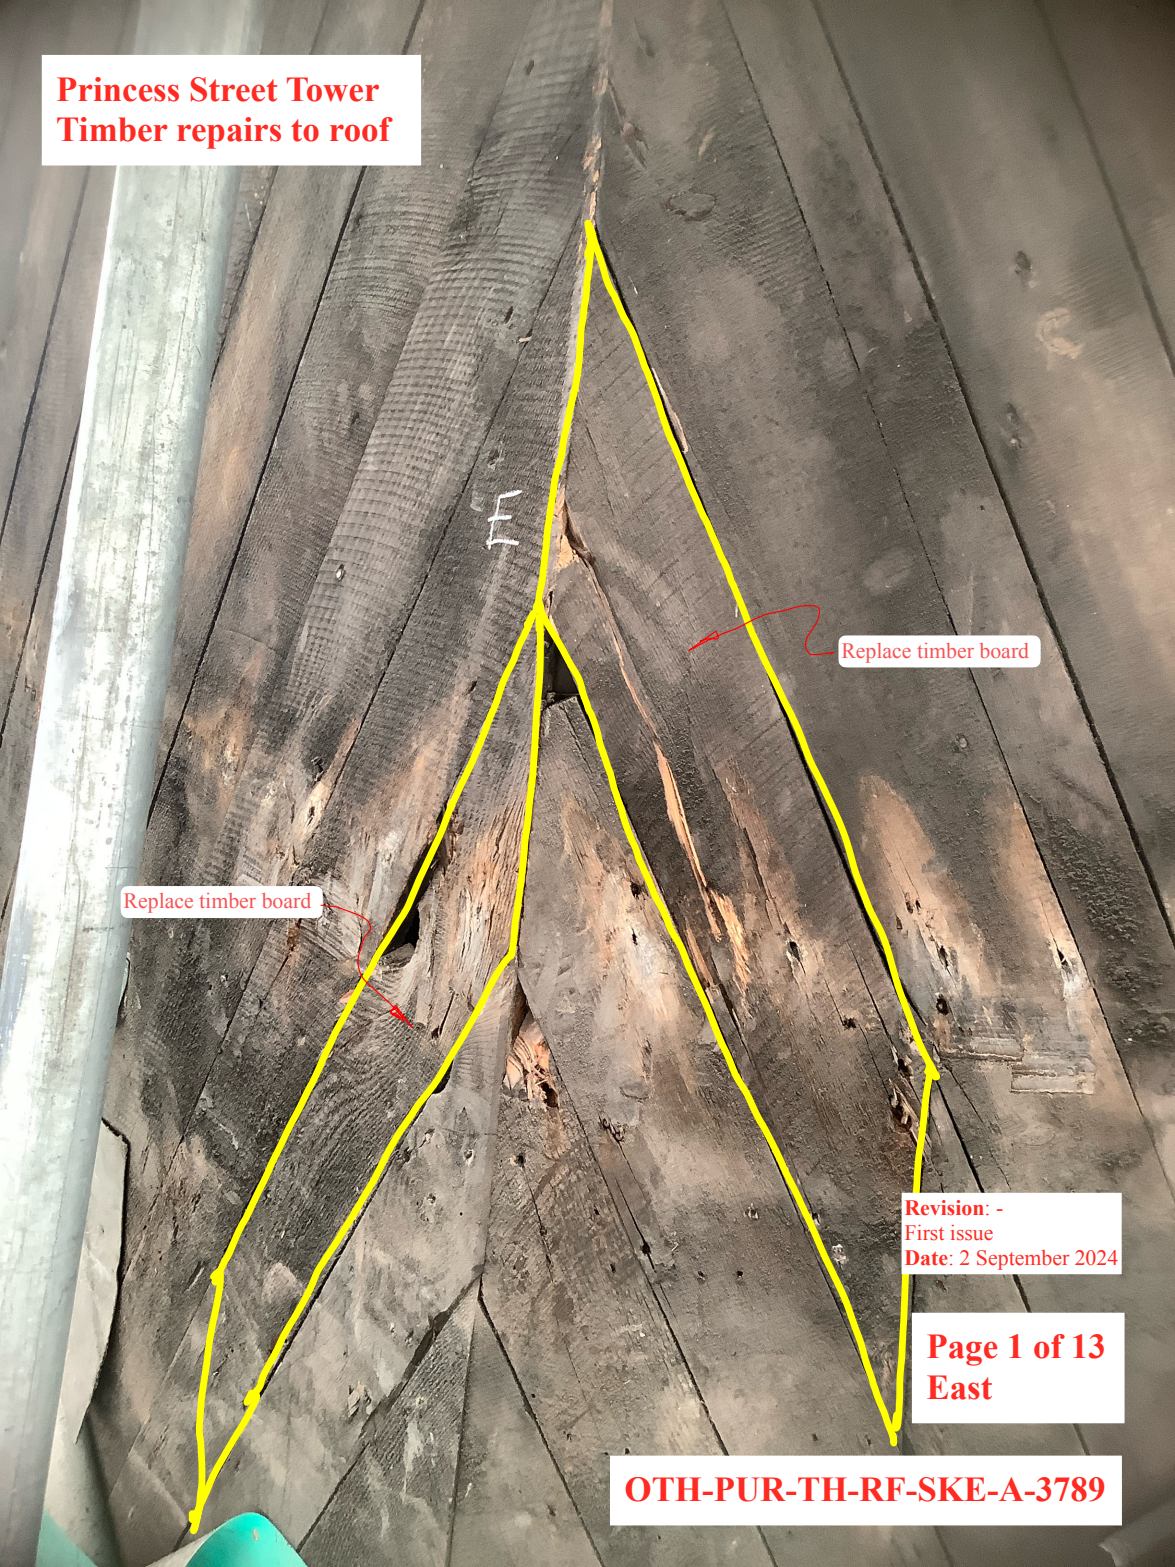

Replace timber board

Replace timber board

Revision: -
First issue
Date: 2 September 2024

**Page 1 of 13
East**

OTH-PUR-TH-RF-SKE-A-3789

Princess Street Tower Timber repairs to roof

Timber boards replaced

NE

Fit replacement square
section softwood dowel
matching size and shape of
original examples

Revision: -
First issue
Date: 2 September 2024

Page 2 of 13
North-East

OTH-PUR-TH-RF-SKE-A-3789

Princess Street Tower Timber repairs to roof

Ensure timber dowel
that has been re-fitted is
vertical

Revision: -
First issue
Date: 2 September 2024

Page 3 of 13
North-West

OTH-PUR-TH-RF-SKE-A-3789

Princess Street Tower Timber repairs to roof

Timber boards replaced

Timber board replaced

Revision: -
First issue
Date: 2 September 2024

Page 4 of 13
West

OTH-PUR-TH-RF-SKE-A-3789

Princess Street Tower Timber repairs to roof

Timber boards replaced

Timber boards replaced

NE

Revision: -
First issue
Date: 2 September 2024

Page 5 of 13
North-East

OTH-PUR-TH-RF-SKE-A-3789

Princess Street Tower Timber repairs to roof

Timber boards replaced

Revision: -
First issue
Date: 2 September 2024

Page 6 of 13
South-East

OTH-PUR-TH-RF-SKE-A-3789

Princess Street Tower Timber repairs to roof



Timber boards replaced

Timber boards replaced

Revision: -
First issue
Date: 2 September 2024

Page 7 of 13
North-East

OTH-PUR-TH-RF-SKE-A-3789

Princess Street Tower Timber repairs to roof

Timber boards replaced

Timber boards replaced

Revision: -
First issue
Date: 2 September 2024

Page 8 of 13
West

OTH-PUR-TH-RF-SKE-A-3789

Princess Street Tower
Timber repairs to roof



Timber board replaced

Revision: -
First issue
Date: 2 September 2024

Page 9 of 13
West

OTH-PUR-TH-RF-SKE-A-3789

Princess Street Tower Timber repairs to roof

Fill splits in solid timber
apex using Repair Care 4
epoxy resin wood filler

Fit additional protection
around bottom of finial to
prevent water ingress and
wetting of timber. Timber to
be allowed to dry before
epoxy resin repairs are
carried out

Extend scaffolding to allow
cast iron finial to be
unscrewed

Fill splits in: solid timber
apex using Repair Care 4
epoxy resin wood filler

Fill splits in solid timber
apex using Repair Care 4
epoxy resin wood filler

Remove existing
boards immediately
below solid timber
apex and replace with
new 25mm thick
softwood boarding

Revision: -
First issue
Date: 2 September 2024

Page 10 of 13
South-East

OTH-PUR-TH-RF-SKE-A-3789

Princess Street Tower Timber repairs to roof

Fill splits in solid timber apex using Repair Care 4 epoxy resin wood filler

Fit additional protection around bottom of finial to prevent water ingress and wetting of timber. Timber to be allowed to dry before epoxy resin repairs are carried out

Extend scaffolding to allow cast iron finial to be unscrewed

Fill splits in solid timber apex using Repair Care 4 epoxy resin wood filler

Fill splits in solid timber apex using Repair Care 4 epoxy resin wood filler

Remove existing boards immediately below solid timber apex and replace with new 25mm thick softwood boarding

Revision: -
First issue
Date: 2 September 2024

Page 11 of 13
North

OTH-PUR-TH-RF-SKE-A-3789

Princess Street Tower Timber repairs to roof

Fill splits in solid timber apex using Repair Care 4 epoxy resin wood filler

Fit additional protection around bottom of finial to prevent water ingress and wetting of timber. Timber to be allowed to dry before epoxy resin repairs are carried out

Extend scaffolding to allow cast iron finial to be unscrewed

Fill splits in solid timber apex using Repair Care 4 epoxy resin wood filler

Remove existing boards immediately below solid timber apex and replace with new 25mm thick softwood boarding

Revision: -
First issue
Date: 2 September 2024

Page 12 of 13
West

OTH-PUR-TH-RF-SKE-A-3789

**Princess Street Tower
Timber repairs to roof**

Fit additional protection around bottom of finial to prevent water ingress and wetting of timber. Timber to be allowed to dry before epoxy resin repairs are carried out

Extend scaffolding to allow cast iron finial to be unscrewed

Fill splits in solid timber apex using Repair Care 4 epoxy resin wood filler

Fill splits in solid timber apex using Repair Care 4 epoxy resin wood filler

Remove existing boards immediately below solid timber apex and replace with new 25mm thick softwood boarding

Revision: -
First issue
Date: 2 September 2024

**Page 13 of 13
South-West**